


## REMOVAL

1. **REMOVE BATTERY CLAMP COVER**
2. **REMOVE ENGINE UNDER COVER**
3. **REMOVE DRIVE BELT**

Loosen the belt tension by turning the belt tensioner counter-clockwise, and remove the drive belt.

**HINT:**

The pulley bolt for the belt tensioner has a left-hand thread.

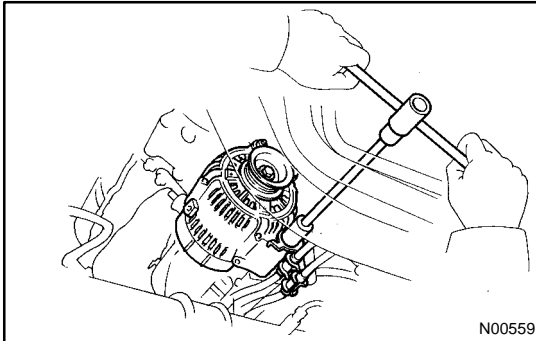

## 4. REMOVE GENERATOR

- (a) Disconnect the generator connector.
- (b) Remove the rubber cap and nut, and disconnect the generator wire.
- (c) Disconnect the generator wire clamp from the cord clip on the generator.
- (d) Remove the bolt, and disconnect transmission oil cooler pipe bracket from the generator.
- (e) Remove the nut and generator.