



REMOVAL

1. REMOVE TRANSMISSION FROM ENGINE

(See page [MT-3](#))

2. REMOVE CLUTCH COVER AND DISC

- Place matchmarks on the flywheel and clutch cover.
- Loosen each set bolt one turn at a time until spring tension is released.
- Remove the set bolts, and pull off the clutch cover with the clutch disc.

NOTICE:

Do not drop the clutch disc.

3. REMOVE RELEASE BEARING, FORK AND BOOT FROM TRANSMISSION

- Remove the clips, and pull off the bearing and hub.
- Remove the fork and boot.

