



DISASSEMBLY

1. **PULL OUT PUSH ROD WITH BOOT**
2. **REMOVE PISTON WITH SPRING**

Using compressed air, remove the piston and its spring from the cylinder.