


REMOVAL

1. DISCONNECT CLUTCH LINE

Using SST, disconnect the clutch line. Use a container to catch the fluid.

SST 09023-00100

Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

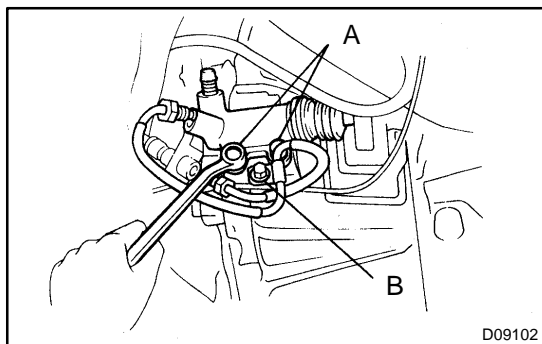

2. REMOVE 3 BOLTS AND PULL OUT RELEASE CYLINDER

Torque:

A: 12 N·m (120 kgf·cm, 9 ft·lbf)

B: 4.9 N·m (50 kgf·cm, 43 in·lbf)