

DTC	51	ABS Pump Motor Lock
------------	-----------	----------------------------

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
51	Pump motor is not operating normally during initial check.	• ABS pump motor

Fail safe function:

If trouble occurs in the ABS pump motor, the ECU cuts off the current to the ABS solenoid relay and prohibits ABS control.

WIRING DIAGRAM

See page [DI-424](#).