


Tc Terminal Circuit

CIRCUIT DESCRIPTION


Connecting between terminals Tc and E₁ of the DLC1 or DLC2 causes the ECU to display the DTC by flashing the ABS warning light.

WIRING DIAGRAM

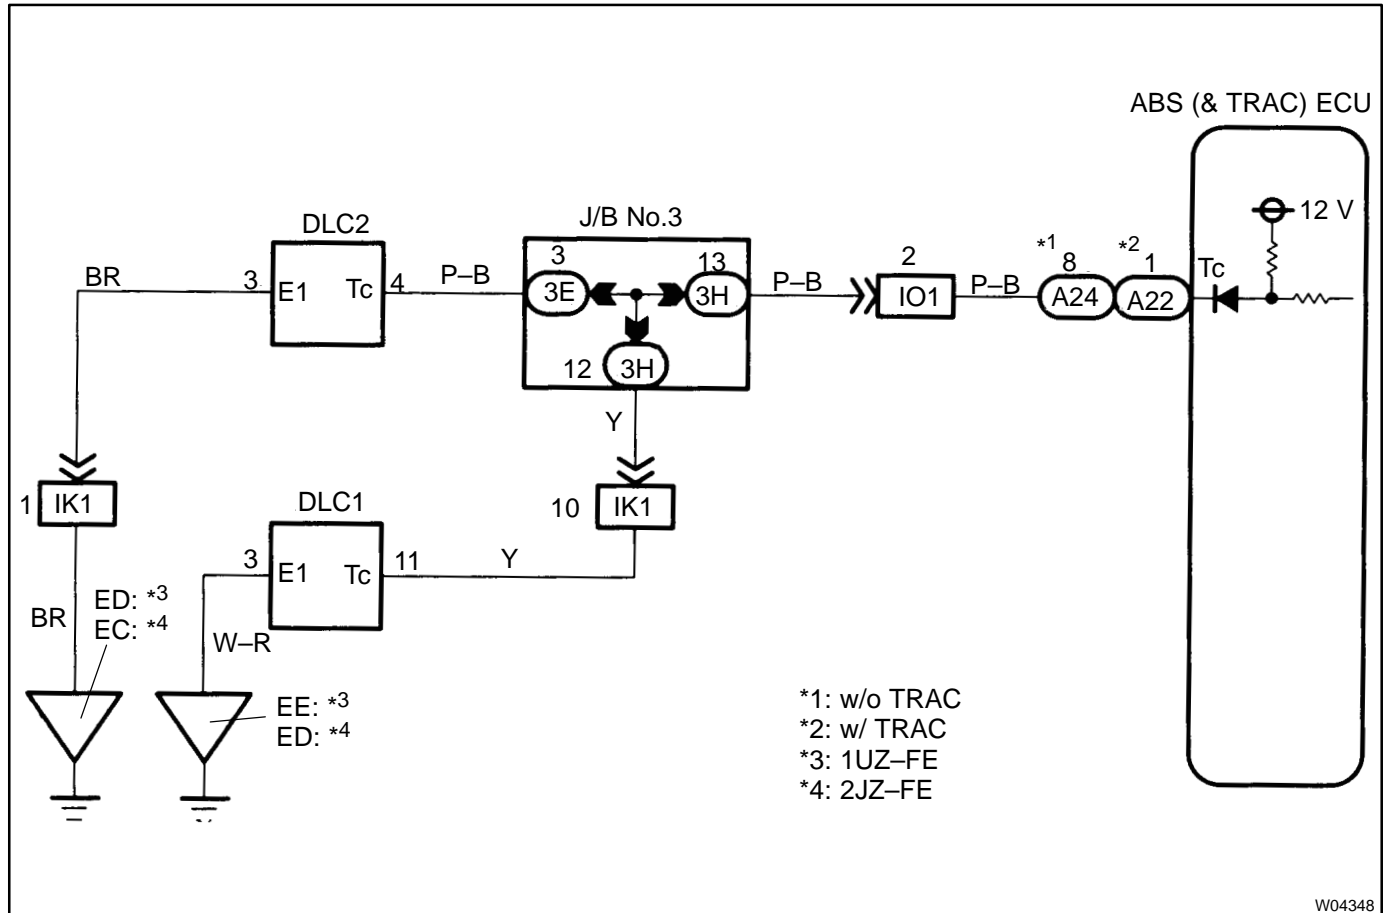

INSPECTION PROCEDURE

- | | |
|----------|--|
| 1 | Check voltage between terminals Tc and E₁ of DLC2 or DLC1. |
|----------|--|

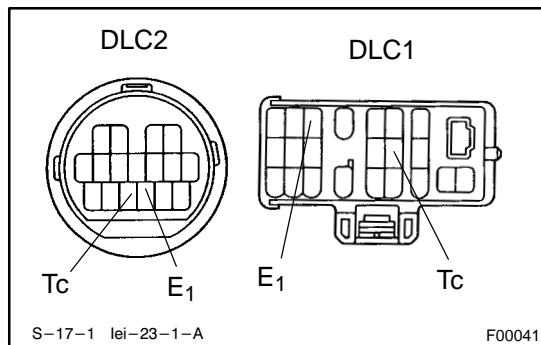**PREPARATION:**

Turn IG switch ON.

CHECK:Measure voltage between terminals Tc and E₁ of DLC2 or DLC1.**OK:****Voltage: 10 – 14 V****OK**If ABS warning light does not blink even after Tc and E₁ are connected, the ECU may be defective.**NG**

- | | |
|----------|--|
| 2 | Check for open and short in harness and connector between ABS (& TRAC) ECU and DLC2 or DLC1, DLC2 or DLC1 and body ground (See page IN-29). |
|----------|--|

NG

Repair or replace harness or connector.

OK

Turn the IG switch off, check and replace ABS (& TRAC) ECU.