


Ts Terminal Circuit

CIRCUIT DESCRIPTION

The sensor check circuit detects abnormalities in the speed sensor signal which cannot be detected with the DTC check.


Connecting terminals Ts and E₁ of the DLC1 in the engine compartment starts the check.

WIRING DIAGRAM

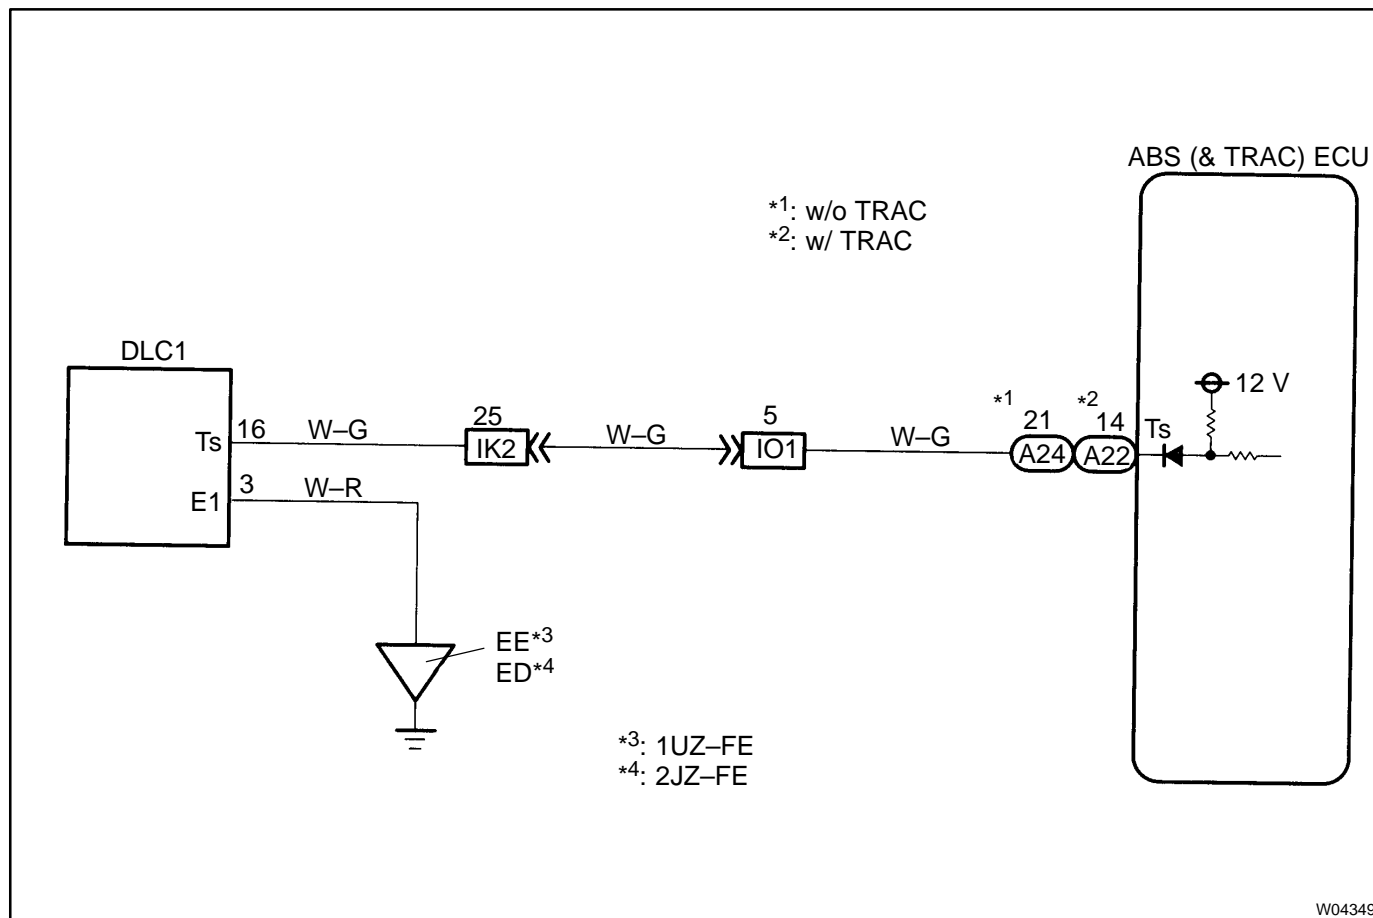

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Check voltage between terminals Ts and E ₁ of DLC1. |
|---|--|

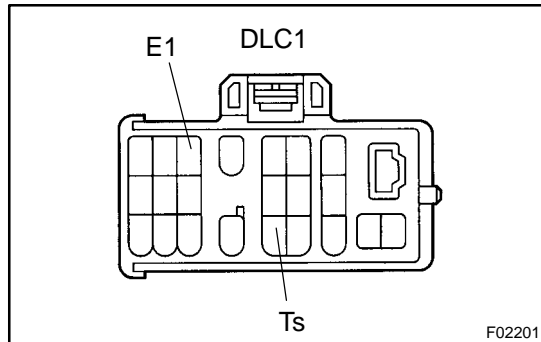**PREPARATION:**

Turn IG switch ON.

CHECK:Measure voltage between terminals Ts and E₁ of DLC1.**OK:**

Voltage: 10 – 14 V

OK

If ABS warning light does not blink even after Ts and E₁ are connected, the ECU may be defective.

NG

- | | |
|---|--|
| 2 | Turn the IG switch OFF, check for open and short in harness and connector between ABS (& TRAC) ECU and DLC1, DLC1 and body ground (See page IN-29). |
|---|--|

NG

Repair or replace harness or connector.

OK

Check and replace ABS (& TRAC) ECU.