



## TERMINALS OF ECM (w/o TRAC)

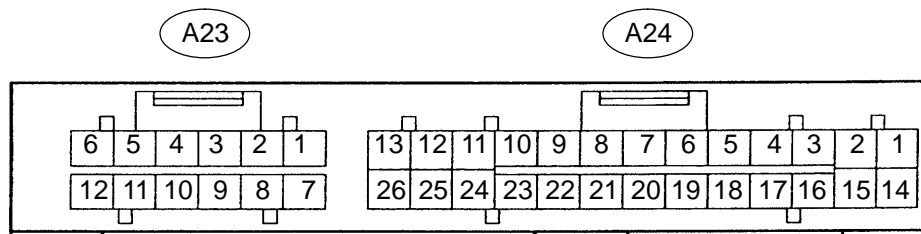

F04417

Symbols (Terminal No.)	STD Voltage (V)	Condition
IG1 (A24-13) – GND (A24-12,25)	10 – 14	IG switch ON
SR (A23-7) – R+ (A24-26)	Below 1.5	IG switch ON, ABS warning light OFF
MR (A23-1) – R+ (A24-26)	10 – 14	IG switch ON
SFRH (A24-2) – GND (A24-12,25)	10 – 14	IG switch ON, ABS warning light OFF
SFRR (A24-1) – GND (A24-12,25)	10 – 14	IG switch ON, ABS warning light OFF
SFLH (A23-5) – GND (A24-12,25)	10 – 14	IG switch ON, ABS warning light OFF
SFLR (A23-6) – GND (A24-12,25)	10 – 14	IG switch ON, ABS warning light OFF
SRR (A23-12) – GND (A24-12,25)	10 – 14	IG switch ON, ABS warning light OFF
SRH (A23-11) – GND (A24-12,25)	10 – 14	IG switch ON, ABS warning light OFF
AST (A23-4) – GND (A24-12,25)	10 – 14	IG switch ON, ABS warning light OFF
WA (A24-11) – GND (A24-12,25)	Below 2.0	IG switch ON, ABS warning light ON
	10 – 14	IG switch ON, ABS warning light OFF
STP (A24-5) – GND (A24-12,25)	Below 1.5	Stop light switch OFF
	8 – 14	Stop light switch ON
D/G (A24-24) – GND (A24-12,25)	10 – 14	IG switch ON, ABS warning light OFF
MT (A23-10) – GND (A24-12,25)	Below 1.5	IG switch ON
Tc (A24-8) – GND (A24-12,25)	10 – 14	IG switch ON
Ts (A24-21) – GND (A24-12,25)	10 – 14	IG switch ON
FR+ (A23-3) – FR- (A23-9)	AC generation	IG switch ON Slowly turn right front wheel
FL+ (A23-8) – FL- (A23-2)	AC generation	IG switch ON Slowly turn left front wheel
RR+ (A24-10) – RR- (A24-23)	AC generation	IG switch ON Slowly turn right rear wheel
RL+ (A24-22) – RL- (A24-9)	AC generation	IG switch ON Slowly turn left rear wheel

(w/ TRAC)

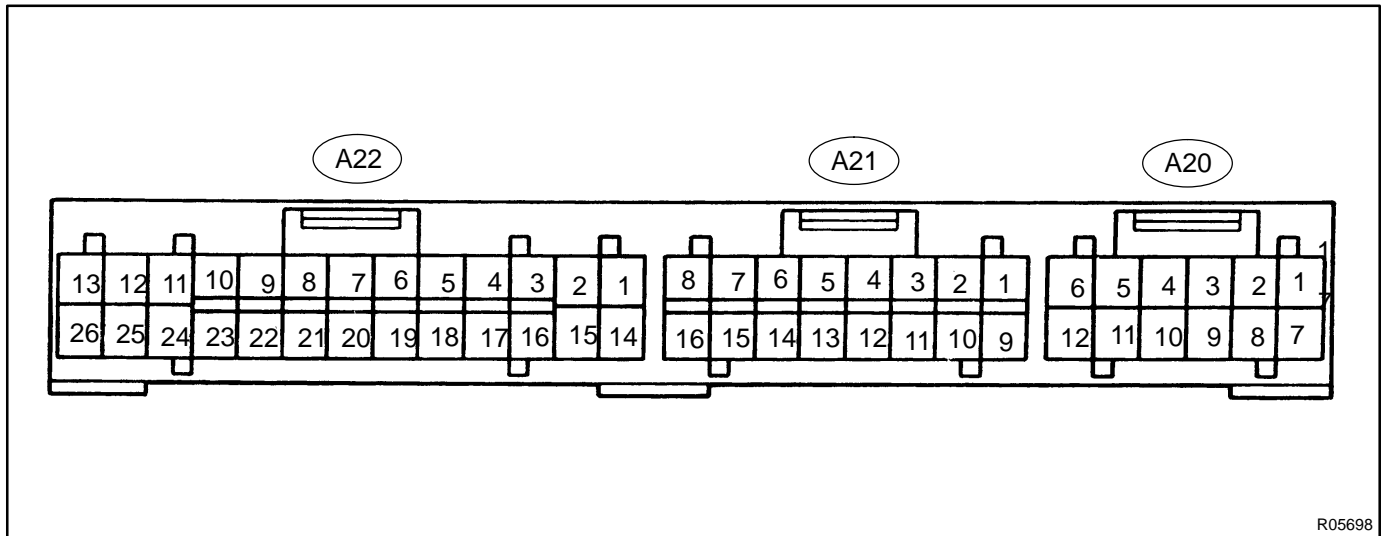

R05698

Symbols (Terminal No.)	STD Voltage (V)	Condition
IG1 (A21-11) – GND (A20-3,10 A22-24)	10 – 14	IG switch ON
SR (A20-4) – R+ (A20-26)	Below 1.5	IG switch ON, ABS warning light OFF
MR (A21-12) – R+ (A20-26)	10 – 14	IG switch ON
SFRH (A22-13) – GND (A20-3,10 A22-24)	10 – 14	IG switch ON, ABS warning light OFF
SFRR (A22-26) – GND (A20-3,10 A22-24)	10 – 14	IG switch ON, ABS warning light OFF
SFLH (A20-2) – GND (A20-3,10 A22-24)	10 – 14	IG switch ON, ABS warning light OFF
SFLR (A20-1) – GND (A20-3,10 A22-24)	10 – 14	IG switch ON, ABS warning light OFF
SRRH (A20-8) – GND (A20-3,10 A22-24)	10 – 14	IG switch ON, ABS warning light OFF
SRRR (A20-7) – GND (A20-3,10 A22-24)	10 – 14	IG switch ON, ABS warning light OFF
SRLH (A22-11) – GND (A20-3,10 A22-24)	10 – 14	IG switch ON, ABS warning light OFF
SRLR (A22-12) – GND (A20-3,10 A22-24)	10 – 14	IG switch ON, ABS warning light OFF
AST (A20-11) – GND (A20-3,10 A22-24)	10 – 14	IG switch ON, ABS warning light OFF
SMC (A22-10) – GND (A20-3,10 A22-24)	10 – 14	IG switch ON, TRAC OFF indicator light OFF
SRC (A22-9) – GND (A20-3,10 A22-24)	10 – 14	IG switch ON, TRAC OFF indicator light OFF
SPC (A22-25) – GND (A20-3,10 A22-24)	10 – 14	IG switch ON, TRAC OFF indicator light OFF
WA (A22-2) – GND (A20-3,10 A22-24)	Below 2.0	IG switch ON, ABS warning light ON
	10 – 14	IG switch ON, ABS warning light OFF
LBL- (A21-12) – GND (A20-3,10 A22-24)	8 – 14	IG switch ON Fluid in M/C reservoir below MIN level
STP (A21-16) – GND (A20-3,10 A22-24)	Below 1.5	Stop light switch OFF
	8 – 14	Stop light switch ON
D/G (A22-15) – GND (A20-3,10 A22-24)	10 – 14	IG switch ON, ABS warning light OFF
Tc (A22-1) – GND (A20-3,10 A22-24)	10 – 14	IG switch ON
Ts (A22-14) – GND (A20-3,10 A22-24)	10 – 14	IG switch ON
FR+ (A22-17) – FR- (A22-4)	AC generation	IG switch ON Slowly turn right front wheel
FL+ (A22-5) – FL- (A22-18)	AC generation	IG switch ON Slowly turn left front wheel
RR+ (A21-2) – RR- (A21-10)	AC generation	IG switch ON Slowly turn right rear wheel

RL+ (A21-9) – RL- (A21-1)	AC generation	IG switch ON Slowly turn left rear wheel
IND (A22-16) – GND (A20-3,10 A22-24)	Below 2.0	IG switch ON, SLIP indicator light ON
	10 – 14	IG switch ON, SLIP indicator light OFF
WT (A22-3) – GND (A20-3,10 A22-24)	Below 2.0	IG switch ON, TRAC OFF indicator light ON
	10 – 14	IG switch ON, TRAC OFF indicator light OFF
CSW (A21-6) – GND (A20-3,10 A22-24)	Below 1.5	IG switch ON, TRAC cut switch pushed in
CSW (A21-6) – GND (A20-3,10 A22-24)	8 – 14	IG switch ON, TRAC cut switch released
NEO (A21-15) – GND (A20-3,10 A22-24)	Pulse generation	Idling
TRA (A21-3) – GND (A20-3,10 A22-24)	Pulse generation	IG switch ON
EFI+ (A21-5) – GND (A20-3,10 A22-24)	Pulse generation	IG switch ON
EFI- (A21-13) – GND (A20-3,10 A22-24)	Pulse generation	IG switch ON
THD (A21-14) – GND (A20-3,10 A22-24)	Pulse generation	IG switch ON
TRC+ (A22-7) – GND (A20-3,10 A22-24)	Pulse generation	TRAC control active
TRC- (A22-20) – GND (A20-3,10 A22-24)	Pulse generation	TRAC control active
MT (A20-5) – GND (A20-3,10 A22-24)	Below 1.5	IG switch ON