

DTC	43	ECM Control System Malfunction
------------	-----------	---------------------------------------


CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
43	ABS control system is abnormal.	• ABS control system

INSPECTION PROCEDURE


1	Check the DTC for the ABS (See page DI-408).
---	---

Output NG code

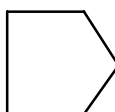

Repair ABS control system according to the code output.

Malfunction indicator lamp remains ON.

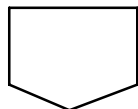

Check for ECU connected to malfunction indicator lamp.