

DTC	51	Engine Control System Malfunction
------------	-----------	--

CIRCUIT DESCRIPTION

 
If trouble occurs in the engine control system, the ECU prohibits TRAC control.

DTC No.	DTC Detecting Condition	Trouble Area
51	Conditions (1) and (2) continue for 7 sec.: (1) Engine Speed: 500 rpm or more. (2) A trouble signal in the engine control system is input.	• Engine control system

INSPECTION PROCEDURE


1	Check the DTC for the engine (See page DI-150 or DI-3).
---	--

Output NG Code



Repair engine control system according to the code output.

 Malfunction indicator light remains ON.



Check for ECU connected to malfunction indicator light.