


Tc Terminal Circuit

CIRCUIT DESCRIPTION


By connecting between terminals Tc and E₁ of DLC1 or DLC2, the ECU displays the DTC by blinking the TRAC OFF indicator light.

WIRING DIAGRAM

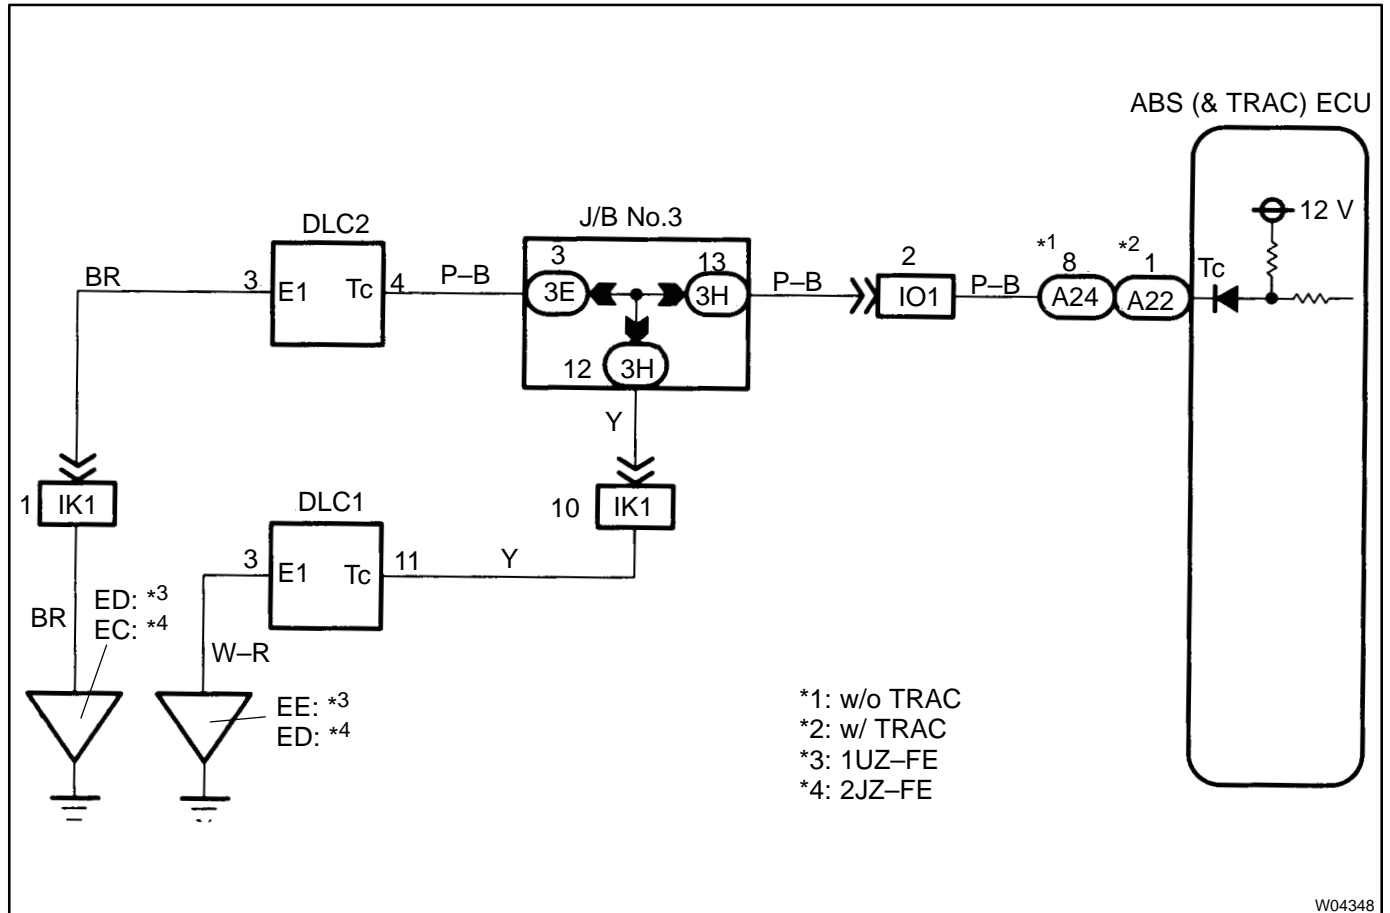

INSPECTION PROCEDURE

- 1 Check voltage between terminals Tc and E₁ of DLC2 or DLC1.

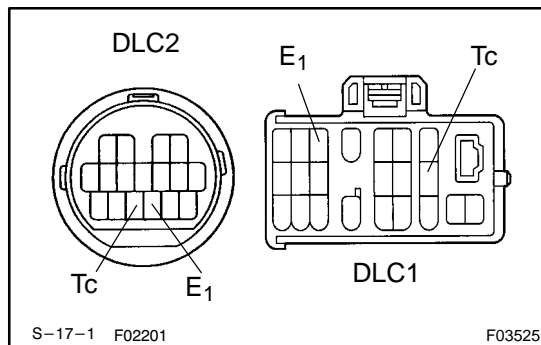**PREPARATION:**

Turn IG switch ON.

CHECK:

Measure voltage between terminals Tc and E₁ of DLC2 or DLC1.

OK:

Voltage: 8 – 14 V

OK

Proceed to next circuit inspection shown on problem symptoms chart (See page [DI-466](#)).

NG

- 2 Check for open and short in harness and connector between ABS & TRAC ECU and DLC2 (or DLC1), DLC2 (or DLC1) and body ground (See page [IN-29](#)).

NG

Repair or replace harness or connector.

OK

Check and replace ABS & TRAC ECU.