

PROBLEM SYMPTOMS TABLE

If a normal code is displayed during the DTC check but the problem still occurs, check the circuits for each problem symptom in the order given in the table below and proceed to the relevant troubleshooting page.

NOTICE:

When removing ABS & TRAC ECU, load, sensor or etc., turn the IG switch OFF.

Symptoms	Inspection Circuit	See page
TRAC does not operate.	Only when inspection circuits for each problem symptom are all normal and the problem is still occurring, replace the ABS & TRAC ECU. 1. Check the DTC, reconfirming that the normal code is output. 2. IG Power Source Circuit. 3. Check the hydraulic circuit or leakage. 4. Speed sensor circuit.	DI-461 DI-436 DI-458 DI-436
SLIP indicator light abnormal.	SLIP indicator light circuit.	DI-488
TRAC OFF indicator light abnormal.	Only when inspection circuits for each problem symptom are all normal and the problem is still occurring, replace the ABS & TRAC ECU. 1. TRAC OFF indicator light circuit. 2. TRAC cut switch circuit.	DI-485 DI-485
DTC check cannot be done.	Only when inspection circuits for each problem symptom are all normal and the problem is still occurring, replace the ABS & TRAC ECU. 1. TRAC OFF indicator light circuit. 2. Tc terminal circuit.	DI-485 DI-490