


TERMINALS OF ECM

ABS & TRAC ECU: See page [DI-415](#).

Throttle Valve Motor Driver:

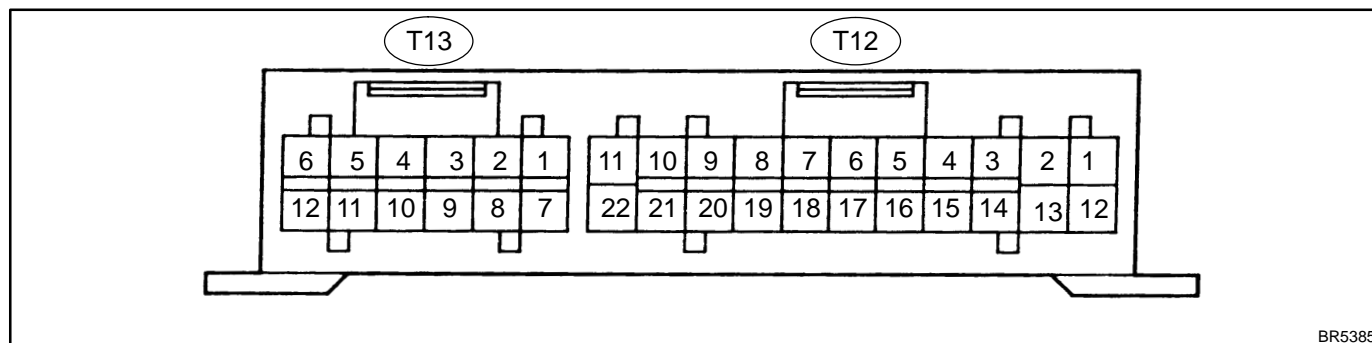

BR5385

Symbols (Terminal No.)	STD Voltage (V)	Condition
BM (T12-1) – GND (T12-12,22)	10 – 14	Always
IG1 (T12-11) – GND (T12-12,22)	10 – 14	IG switch ON
ACM (T13-2) – GND (T12-12,22)	10 – 14	IG switch ON Sub-throttle valve fully open
A (T13-12) – GND (T12-12,22)	10 – 14	IG switch ON Sub-throttle valve fully open
A- (T13-11) – GND (T12-12,22)	10 – 14	IG switch ON Sub-throttle valve fully open
BCM (T13-6) – GND (T12-12,22)	10 – 14	IG switch ON Sub-throttle valve fully open
B (T13-8) – GND (T12-12,22)	10 – 14	IG switch ON Sub-throttle valve fully open
B- (T13-9) – GND (T12-12,22)	10 – 14	IG switch ON Sub-throttle valve fully open
IDL2 (T13-4) – GND (T12-12,22)	Below 1.0	IG switch ON, Sub-throttle valve fully closed
	10 – 14	IG switch ON, Sub-throttle valve fully open
THDO (T12-4) – GND (T12-12,22)	Pulse generation	IG switch ON
TRC+ (T12-9) – GND (T12-12,22)	Pulse generation	TRAC control active
TRC- (T12-8) – GND (T12-12,22)	Pulse generation	TRAC control active