

DIAGNOSTIC TROUBLE CODE CHART

If a DTC is displayed during the DTC check, check the circuit listed for that code in the table below and proceed to the page given.

DTC No. (See Page)	Detection Item	Trouble Area	MIL*	Memory
P0500 (DI-371)	Vehicle Speed Sensor Malfunction (Vehicle Speed Sensor)	<ul style="list-style-type: none"> • Open or short in vehicle speed sensor circuit • Vehicle speed sensor • ECM 	●	○
P0710 (DI-372)	Transmission Fluid Temperature Sensor Circuit Malfunction (ATF Temperature Sensor)	<ul style="list-style-type: none"> • Open or short ATF temperature sensor circuit • ATF temperature sensor • ECM 	●	○
P0715 (DI-374)	Input/Turbine Speed Sensor Circuit Malfunction (O/D Direct Clutch Speed Sensor)	<ul style="list-style-type: none"> • Open or short in O/D direct clutch speed sensor circuit • O/D direct clutch speed sensor • ECM 	●	○
P0750 (DI-377)	Shift Solenoid "A" Malfunction (Shift Solenoid Valve No.1)	<ul style="list-style-type: none"> • Shift solenoid valve No.1 is stuck or closed • Valve body is blocked up or stuck 	●	○
P0753 (DI-378)	Shift Solenoid "A" Electrical Malfunction (Shift Solenoid Valve No.1)	<ul style="list-style-type: none"> • Open or short in shift solenoid valve No.1 circuit • Shift solenoid valve No.1 • ECM 	●	○
P0755 (DI-377)	Shift Solenoid "B" Malfunction (Shift Solenoid Valve No.2)	<ul style="list-style-type: none"> • Shift solenoid valve No.2 is stuck or closed • Valve body is blocked up or stuck 	●	○
P0758 (DI-378)	Shift Solenoid "B" Electrical Malfunction (Shift Solenoid Valve No.2)	<ul style="list-style-type: none"> • Open or short in shift solenoid valve No.2 circuit • Shift solenoid valve No.2 • ECM 	●	○
P0770 (DI-381)	Shift Solenoid "E" Malfunction (Shift Solenoid Valve SLU)	<ul style="list-style-type: none"> • Shift solenoid valve is stuck open or closed • Valve body is blocked up or stuck • Lock-up clutch (Torque converter clutch) 	●	○
P1520 (DI-383)	Stop Light Switch Signal Malfunction	<ul style="list-style-type: none"> • Open or short in stop light switch signal circuit • Stop light switch • ECM 	●	○
P1700 (DI-384)	Speed Sensor No.2 Circuit Malfunction (No.2 Vehicle Speed Sensor)	<ul style="list-style-type: none"> • Open or short in No.2 vehicle speed sensor circuit malfunction • No.2 vehicle speed sensor • ECM 	●	○
P1755 (DI-388)	Liner Solenoid for Lock-up Con- trol Circuit Malfunction (Shift Solenoid Valve SLU)	<ul style="list-style-type: none"> • Open or short in shift solenoid valve SLU circuit • Shift solenoid valve SLU • ECM 	●	○
P1765 (DI-390)	Liner Solenoid for Accumulator Pressure Control Circuit Malfunction (Shift Solenoid Valve SLN)	<ul style="list-style-type: none"> • Open or short in shift solenoid valve SLN circuit • Shift solenoid valve SLN • ECM 	●	○
P1780 (DI-393)	PNP Switch Malfunction (Park/Neutral Position Switch)	<ul style="list-style-type: none"> • Short in park/neutral position switch circuit • Park/neutral position switch • ECM 	●	○

*: ●... MIL lights up