

<b>DTC</b>	<b>P0750, P0755</b>	<b>Shift Solenoid "A"/"B" Malfunction (Shift Solenoid Valve No.1/No.2)</b>
------------	---------------------	--

## SYSTEM DESCRIPTION

The ECM uses signals from the vehicle speed sensor to detect the actual gear position (1st, 2nd, 3rd or O/D gear). The ECM then compares the actual gear with the shift schedule in the ECM memory to detect mechanical trouble of the shift solenoid valves and valve body.


DTC No.	DTC Detecting Condition	Trouble Area
P0750 P0755	During normal driving the gear required by the ECM does not match the actual gear. (2 trip detection logic)	<ul style="list-style-type: none"> <li>Shift solenoid valve No.1/No.2 is stuck open or closed</li> <li>Valve body is blocked up or stuck</li> </ul>

### HINT:

Check the shift solenoid valve No.1 when DTC P0750 is output and check shift solenoid valve No.2 when DTC P0755 is output.

## INSPECTION PROCEDURE

<b>1</b>	<b>Check shift solenoid valve No.1 or No.2 operation.</b>
----------	---

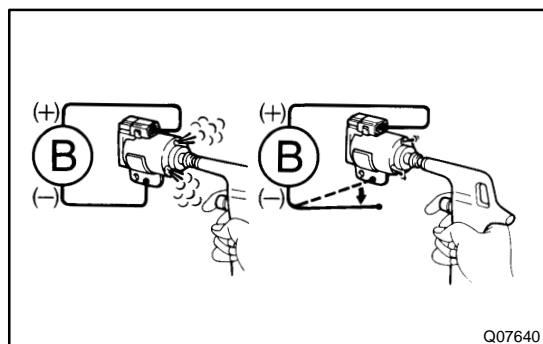

### PREPARATION:

- Remove the oil pan.
- Remove the shift solenoid valve No.1 or No.2.

### CHECK:

- Applying 490 kPa (5 kgf/cm<sup>2</sup>, 71 psi) of compressed air, check that the shift solenoid valves do not leak air.
- When battery positive voltage is supplied to the shift solenoid valves, check they open.

**NG**

**Replace shift solenoid valve No.1 or No.2.**

**OK**

<b>2</b>	<b>Check valve body (See page <a href="#">DI-314</a>).</b>
----------	--

**NG**

**Repair or replace valve body.**

**OK**

**Repair the transmission (See page [AT-20](#)).**