


## Diagnosis Circuit

### CIRCUIT DESCRIPTION


This circuit sends a signal to the ECU that DTC output is required.

### WIRING DIAGRAM

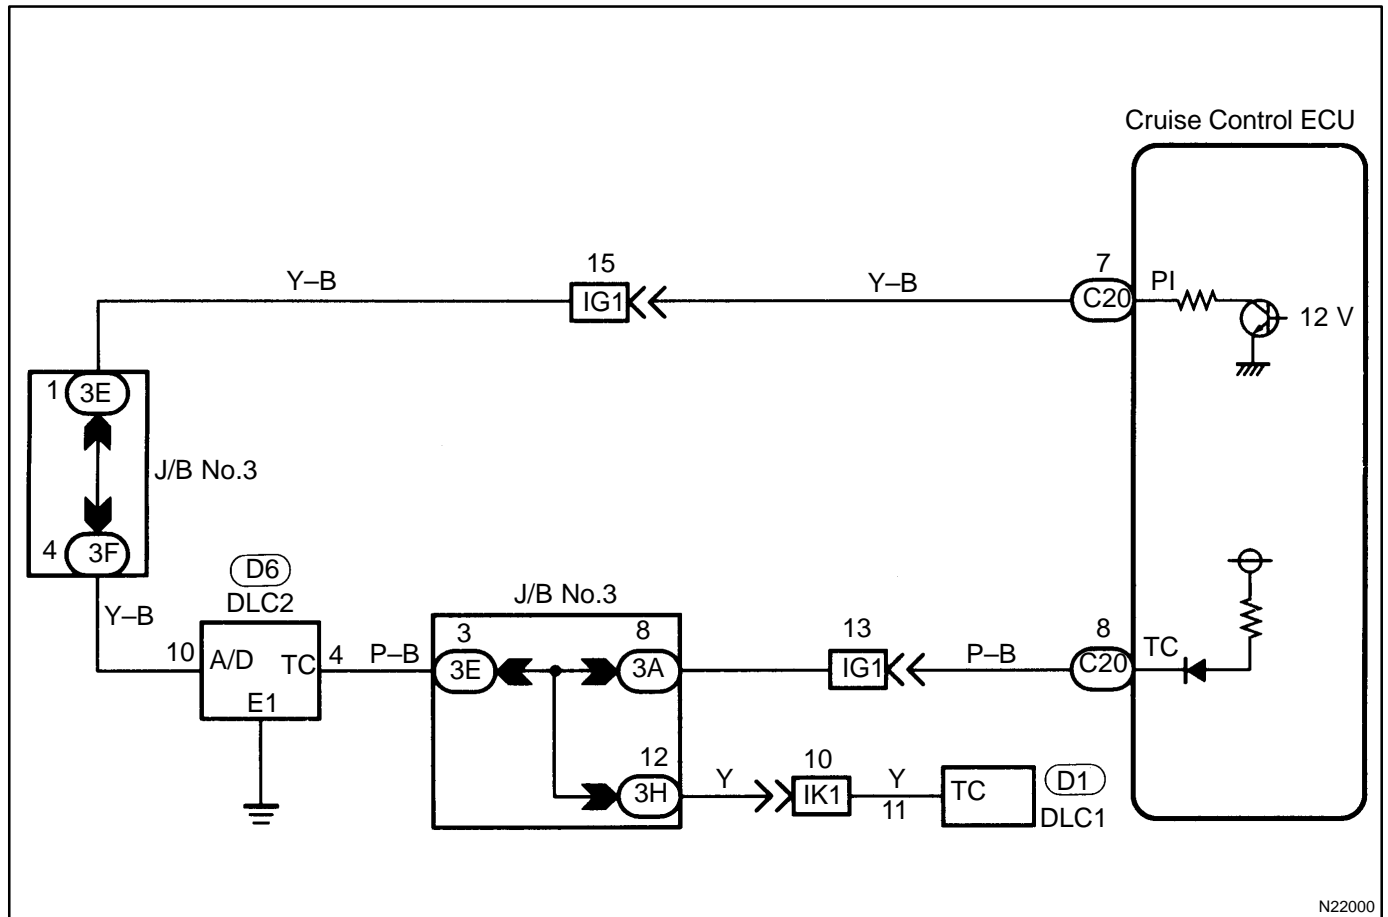

**INSPECTION PROCEDURE**

- 1** Check voltage between terminals Tc and E<sub>1</sub> of DLC2.

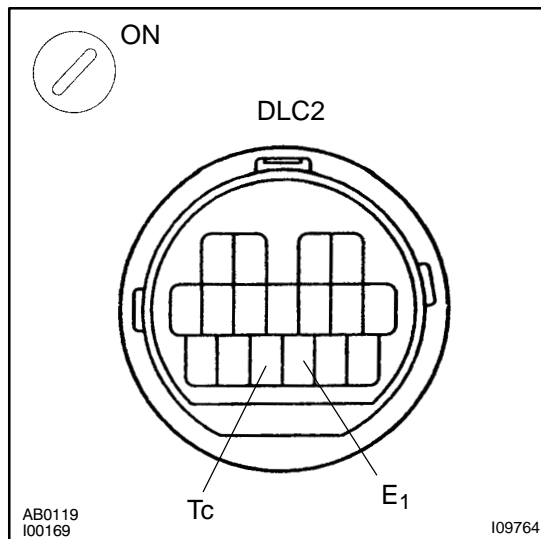**PREPARATION:**

Turn ignition switch ON.

**CHECK:**

Measure voltage between terminals Tc and E<sub>1</sub> of DLC2.

**OK:**

**Voltage: 10 – 14 V**

**OK**

**Proceed to next circuit inspection shown on problem symptom table (See page DI-769).**

**NG**

- 2** Check harness and connector between cruise control ECU and DLC2, DLC2 and body ground (See page [IN-29](#)).

**NG**

**Repair or replace harness or connector.**

**OK**

**Check and replace cruise control ECU  
(See page [IN-29](#)).**