

DIAGNOSTIC TROUBLE CODE CHART

If a malfunction code is displayed during the DTC check, check the circuit listed for that code in the table below and proceed to the appropriate page.

| DTC No. (See Page) | Detection Item | Trouble Area |
|-----------------------|--------------------------------------|---|
| 11, 15 (DI-771) | Actuator Motor Circuit | <ul style="list-style-type: none"> • Actuator motor • Harness or connector between cruise control ECU and actuator motor • Cruise control ECU |
| 12 (DI-773) | Actuator Magnetic Clutch Circuit | <ul style="list-style-type: none"> • STOP Fuse • Stop light switch • Actuator magnetic clutch • Harness or connector between cruise control ECU and actuator magnetic clutch, actuator magnetic clutch and body ground • Cruise control ECU |
| 14 (DI-776) | Actuator Mechanical Malfunction | <ul style="list-style-type: none"> • Actuator motor (actuator lock: motor, arm) • Harness or connector between cruise control ECU and actuator motor • Cruise control ECU |
| 21 (DI-778) | Open in Vehicle Speed Sensor Circuit | <ul style="list-style-type: none"> • Combination meter • Harness or connector between cruise control ECU and combination meter, combination meter and vehicle speed sensor • Vehicle speed sensor • Cruise control ECU |
| 23 (DI-781) | Vehicle Speed Signal Abnormal | <ul style="list-style-type: none"> • Vehicle speed sensor • Cruise control ECU |
| 32 (DI-782) | Control Switch Circuit | <ul style="list-style-type: none"> • Cruise control switch • Harness or connector between cruise control ECU and cruise control switch, cruise control switch and body ground • Cruise control ECU |
| 41 | Cruise control ECU | <ul style="list-style-type: none"> • Cruise control ECU |
| 42 | Source voltage drop | <ul style="list-style-type: none"> • Power source |
| 51 (DI-785) | Idle Signal Circuit | <ul style="list-style-type: none"> • Throttle position sensor • Harness or connector between ECM and throttle position sensor • Harness or connector between cruise control ECU and throttle position sensor, throttle position sensor and body ground • Cruise control ECU |