

<b>DTC</b>	<b>P1335</b>	<b>Crankshaft Position Sensor Circuit Malfunction (during engine running)</b>
------------	--------------	---

## CIRCUIT DESCRIPTION

Refer to DTC No. P0335 on page [DI-215](#).

DTC No.	DTC Detecting Condition	Trouble Area
P1335	No crankshaft position sensor signal to ECM with engine speed 1,000 rpm or more	<ul style="list-style-type: none"><li>• Open or short in crankshaft position sensor circuit</li><li>• Crankshaft position sensor</li><li>• Starter</li><li>• ECM</li></ul>

See DTC P0335 for Wiring Diagram and Inspection Procedure.