

# ENGINE (1UZ-FE)

## HOW TO PROCEED WITH TROUBLESHOOTING

DI44B-01

Perform troubleshooting in accordance with the procedure on the following page.

