


Fuel Pressure Control Circuit

CIRCUIT DESCRIPTION

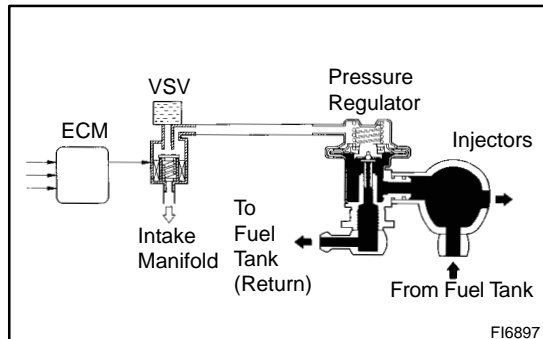


The ECM turns on a VSV (Vacuum Switching Valve) to draw the air into the diaphragm chamber of the pressure regulator if it detects that the temperature of the engine coolant is too high during engine starting.

The air drawn into the chamber increases the fuel pressure to prevent fuel vapor lock at high engine temperature in order to help the engine start when it is warm.

Fuel pressure control ends approx. 120 sec. after the engine is started.


WIRING DIAGRAM

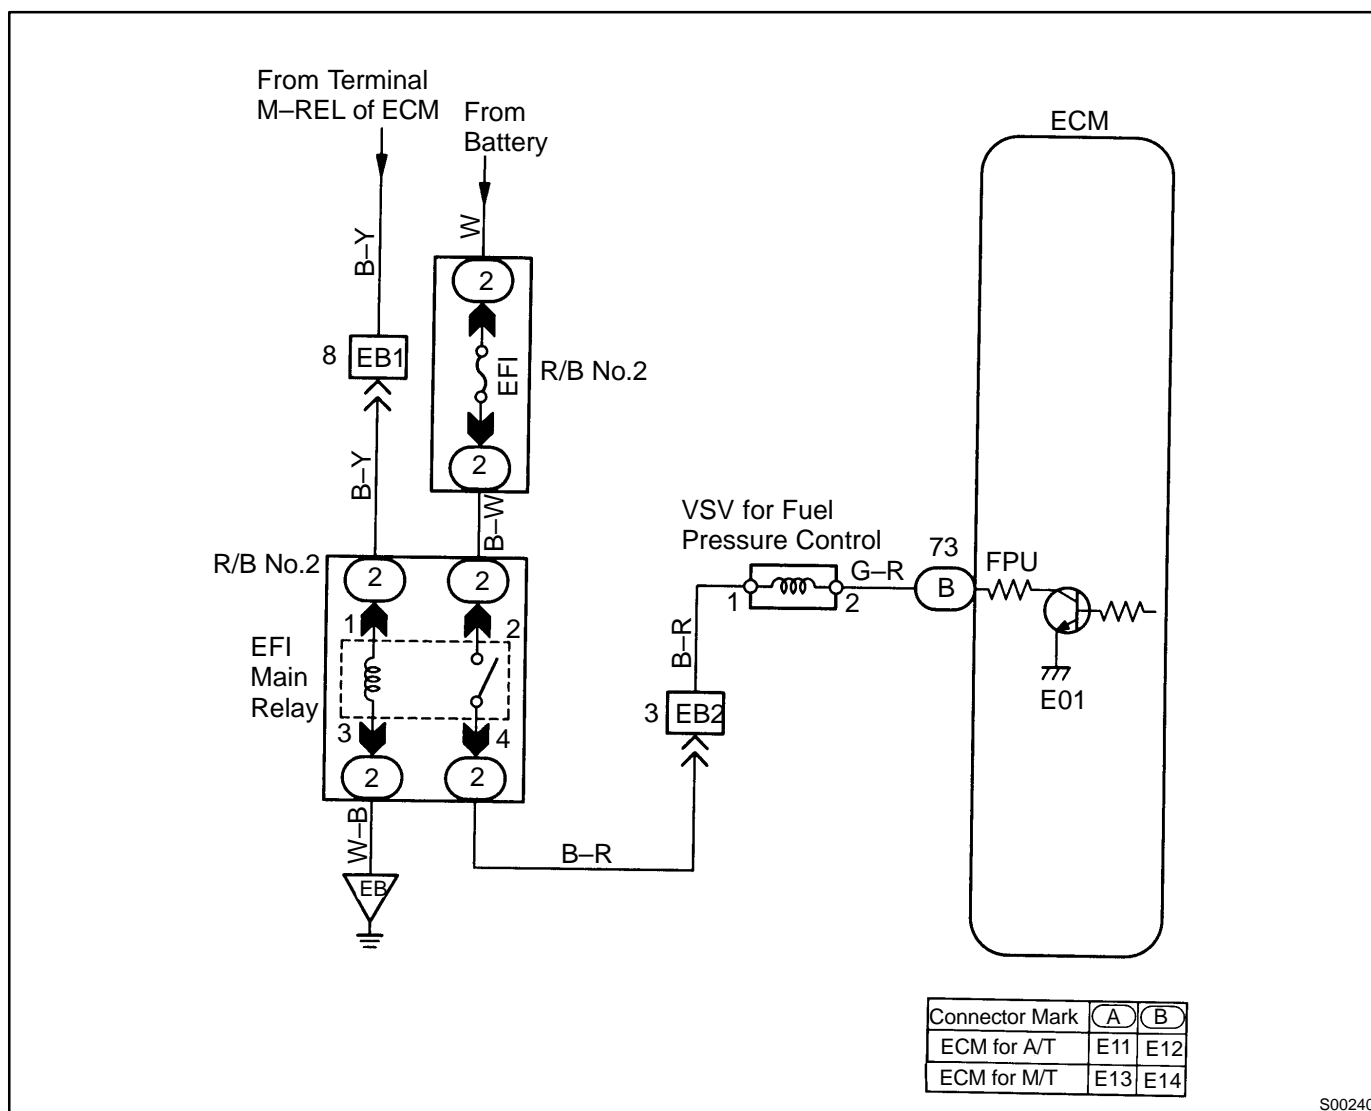

INSPECTION PROCEDURE

LEXUS hand-held tester

- | | |
|---|-------------------------------------------------------------------------------------------------|
| 1 | Connect the LEXUS hand-held tester and check operation of VSV for fuel pressure control. |
|---|-------------------------------------------------------------------------------------------------|

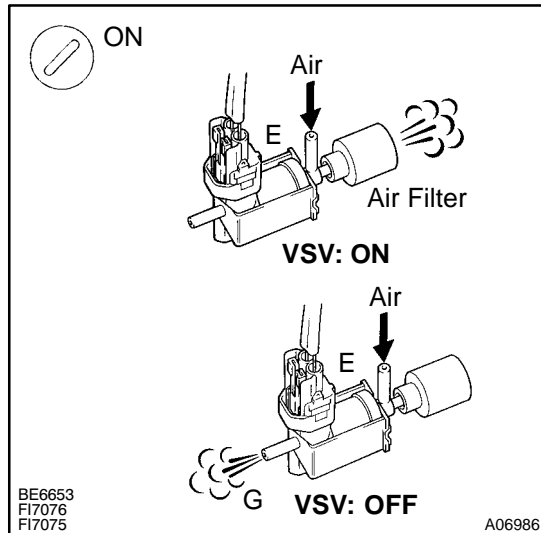**PREPARATION:**

- Connect the LEXUS hand-held tester to the DLC3.
- Turn ignition switch ON and LEXUS hand-held tester main switch ON.
- Select the ACTIVE TEST mode on the LEXUS hand-held tester.

CHECK:

Check operation of VSV when VSV is operated by the LEXUS hand-held tester.

OK:

VSV is ON:

Air from pipe E flows out through the air filter.

VSV is OFF:

Air from pipe E flows out through pipe G.

OK

Check and repair fuel pressure regulator
(See page SF-6).

NG

- | | |
|---|--------------------------------------------------------------|
| 2 | Check VSV for fuel pressure control (See page SF-65). |
|---|--------------------------------------------------------------|

NG

Replace VSV for fuel pressure control.

OK

3	Check for open and short in harness and connector between EFI main relay (Marking: EFI MAIN) and ECM (See page IN-29).
---	-----------------------------------------------------------------------------------------------------------------------------------------

NG

Repair or replace harness or connector.

OKCheck and replace ECM (See page [IN-29](#)).

OBDII scan tool (excluding LEXUS hand-held tester)


1 Check VSV for fuel pressure control (See page SF–65).

NG

Replace VSV for fuel pressure control.

OK

2 Check voltage between terminal FPU of ECM connector and body ground.

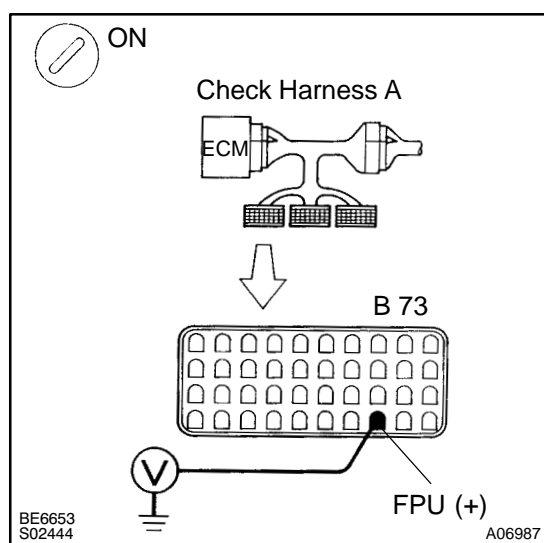**PREPARATION:**

- (a) Connect Check Harness A (See page DI–18).
- (b) Turn ignition switch ON.

CHECK:

Measure voltage between terminal FPU of ECM connector and body ground.

OK:

Voltage: 9 – 14 V

NG

Check for open and short in harness and connector between EFI main relay (Marking: EFI MAIN) and ECM (See page IN–29).

OK

3 Check fuel pressure regulator (See page SF–6).

NG

Repair or replace.

OK

Check and replace ECM (See page IN–29).