

DTC	P0101	Mass Air Flow Circuit Range / Performance Problem
------------	--------------	--

CIRCUIT DESCRIPTION

Refer to Mass Air Flow Circuit Malfunction on page [DI-24](#).

DTC No.	DTC Detecting Condition	Trouble Area
P0101	Conditions (a) and (b) continue with engine speed 1,000 rpm or less: (2 trip detection logic) (a) Closed throttle position switch: ON (b) Mass air flow meter output > 2.2 V	• Mass air flow meter
	Conditions (a) and (b) continue with engine speed 2,000 rpm or more: (2 trip detection logic) (a) Mass air flow meter output < 1.0 V (b) Throttle position sensor output \geq 0.64 V	

WIRING DIAGRAM

Refer to page [DI-24](#) for the WIRING DIAGRAM.

INSPECTION PROCEDURE

1	Are there any other codes (besides DTC P0101) being output?
----------	--

YES

Go to relevant DTC chart.

NO

Replace mass air flow meter.