

DTC	P1335	Crankshaft Position Sensor Circuit Malfunction (during engine running)
------------	--------------	---

CIRCUIT DESCRIPTION

Refer to Crankshaft Position Sensor "A" Circuit Malfunction on page [DI-67](#).

DTC No.	DTC Detecting Condition	Trouble Area
P1335	No crankshaft position sensor signal (NE signal) to ECM with engine speed 1,000 rpm or more	<ul style="list-style-type: none">• Open or short in crankshaft position sensor circuit for NE signal• Crankshaft position sensor for NE signal• Starter• ECM

See DTC P0335 for WIRING DIAGRAM and INSPECTION PROCEDURE.