

<b>DTC</b>	<b>P1605</b>	<b>Knock Control CPU Malfunction</b>
------------	--------------	--------------------------------------

## CIRCUIT DESCRIPTION

Refer to Knock Sensor 1, 2 Circuit Malfunction on page [DI-64](#).

DTC No.	DTC Detecting Condition	Trouble Area
P1605	Engine control computer malfunction (for knock control)	• ECM

## WIRING DIAGRAM

Refer to page [DI-64](#) for the WIRING DIAGRAM.

## INSPECTION PROCEDURE

<b>1</b>	<b>Are there any other codes (besides DTC P1605) being output?</b>
----------	--

**YES**

**Go to relevant DTC chart.**

**NO**

**Check and replace ECM (See page [IN-29](#)).**