

ENGINE (2JZ–GE)

HOW TO PROCEED WITH TROUBLESHOOTING

DI432-01

Troubleshoot in accordance with the procedure on the following page.

