

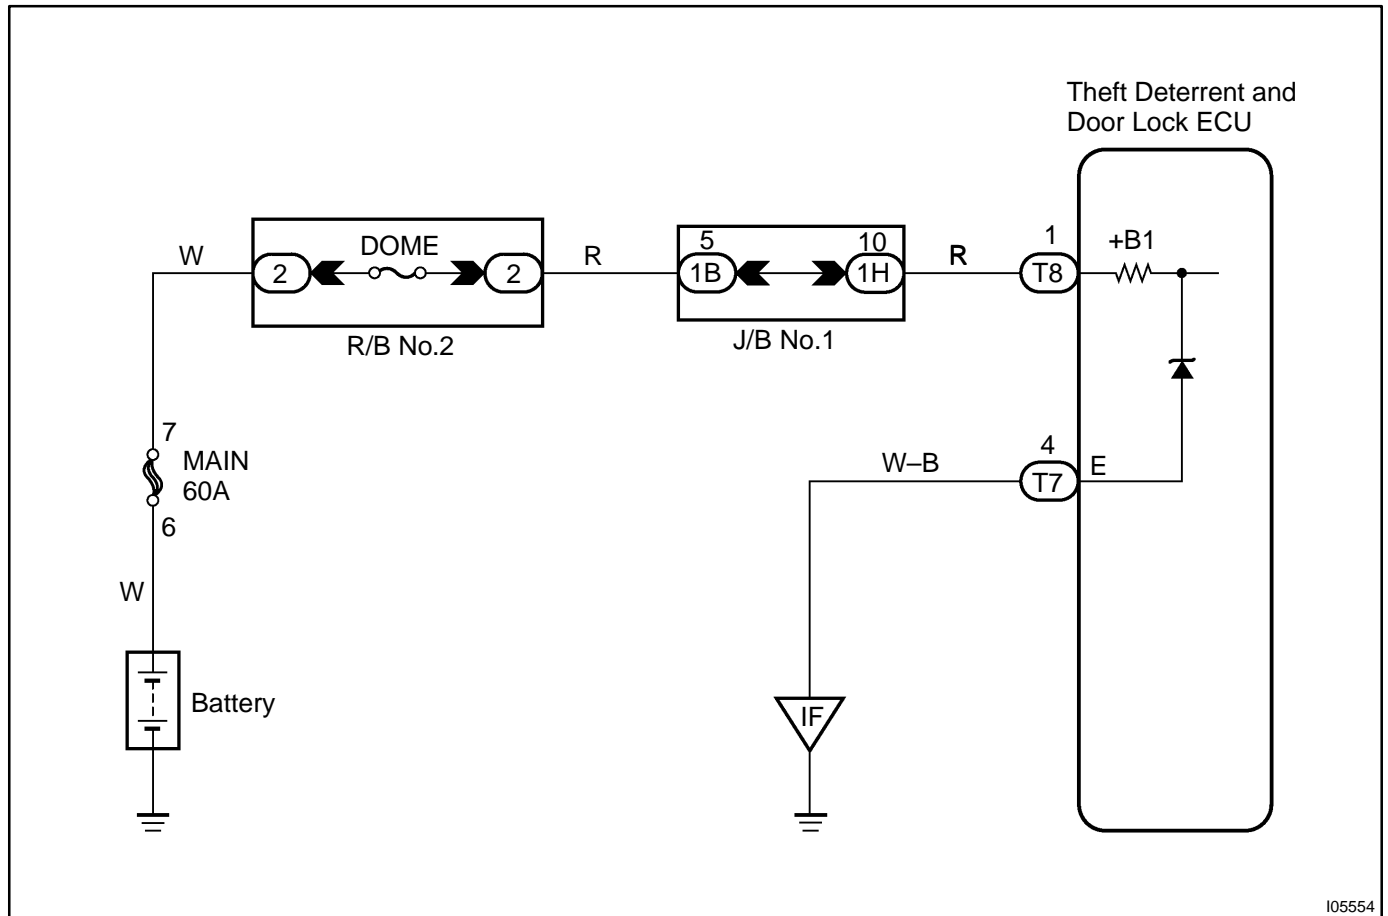
CIRCUIT INSPECTION

ECU Power Source Circuit

CIRCUIT DESCRIPTION

This circuit provides power to operate the theft deterrent and door lock ECU.

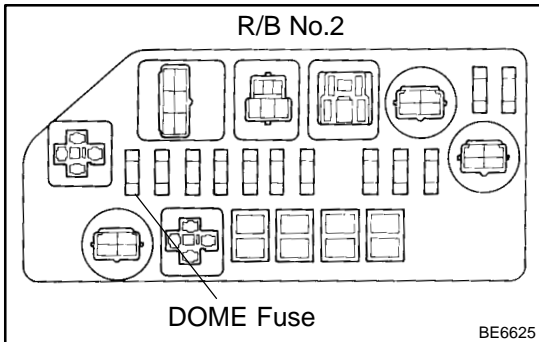
WIRING DIAGRAM



I05554

INSPECTION PROCEDURE

1 Check DOME fuse.

**PREPARATION:**

Remove DOME fuse from R/B No.2.

CHECK:

Check continuity of DOME fuse.

OK:

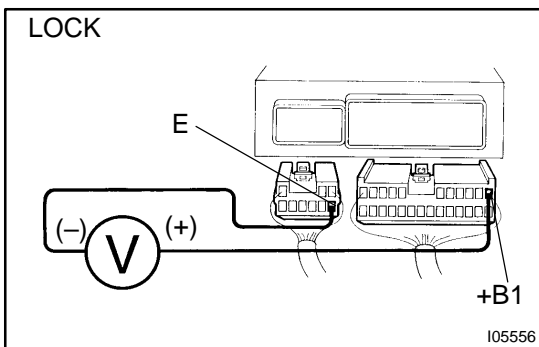
Continuity

NG

Check for short in all the harness and components connected to the DOME fuse (See attached wiring diagram).

OK

2 Check voltage between terminals +B1 and E of ECU connector.

**PREPARATION:**

- (a) Remove the No.1 under cover and heater duct.
- (b) Disconnect the theft deterrent and door lock ECU connectors.

CHECK:

Measure voltage between terminals +B1 and E of ECU connector.

OK:

Voltage: 10 – 14 V

OK

Proceed to next circuit inspection shown on matrix chart (See page DI-664).

NG

3	Check for open in harness and connector between ECU and body ground (See page IN-29).
---	---

NG**Repair or replace harness or connector.****OK****Check and repair harness and connector between ECU and battery.**