

PROBLEM SYMPTOMS TABLE

Perform troubleshooting of the circuits for the applicable problem symptom in the order given in the chart below.

Proceed to the page located for each circuit.

HINT:

- If the instruction "Proceed to next circuit inspection shown on matrix chart" is given in the flow chart for each circuit, proceed to the circuit with the next highest number in the table to continue the check.
- If the trouble still reappears even though there are no abnormalities in any of the other circuits, then check or replace the Theft Deterrent and Door Lock ECU as the last step.

Symptom	Suspect Area	See page
Whole functions of the door lock control system does not operate.	1. ECU Power Source Circuit 2. Actuator Power Source Circuit 3. Luggage Compartment Door Opener Motor Circuit 4. Door Lock Motor Circuit 5. Theft Deterrent and Door Lock Control ECU	DI-634 DI-668 DI-674 DI-671 IN-29
All doors or some doors are not locked and unlocked with the Door Lock Control Switch and Door Key Lock and Unlock Switch. (Luggage compartment door opener function normally operate.)	1. Door Lock Control Switch Circuit 2. Door Key Lock and Unlock Switch Circuit 3. Door Lock Motor Circuit 4. Theft Deterrent and Door Lock Control ECU	DI-676 DI-679 DI-671 IN-29
Doors cannot be locked or unlocked with the door lock control switch. (Doors lock and unlock normally with the door key lock and unlock switch.)	1. Door Lock Control Switch Circuit 2. Key Unlock Warning Switch Circuit 3. Door Open Detection Switch Circuit 4. Theft Deterrent and Door Lock Control ECU	DI-676 DI-681 DI-688 IN-29
Doors are not locked or unlocked with the door key lock and unlock switch. (Doors lock and unlock normally with the door lock control switch).	1. Door Key Lock and Unlock Switch Circuit 2. Theft Deterrent and Door Lock Control ECU	DI-679 IN-29
Key confinement prevention function does not operate. (Doors lock and unlock normally with the door key lock and unlock switch).	1. Key Unlock Warning Switch Circuit 2. Door Unlock Detection Switch Circuit 3. Door Open Detection Switch Circuit 4. Theft Deterrent and Door Lock Control ECU	DI-681 DI-683 DI-688 IN-29
Luggage compartment door opener function does not operate.	1. Luggage Compartment Door Opener Main Switch and Opener Switch Circuit 2. Luggage Compartment Door Opener Motor Circuit 3. Theft Deterrent and Door Lock Control ECU	DI-685 DI-674 IN-29