


PARTS LOCATION

Driving Position Memory & Return Switches


Park/Neutral Position Switch

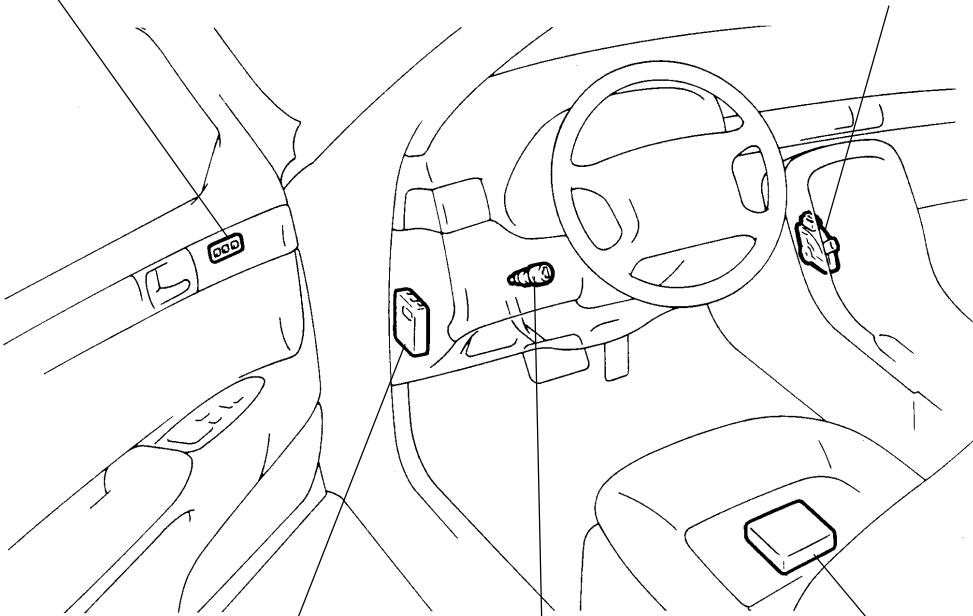

Tilt & Telescopic ECU

Stop Light Switch

Driver's Seat ECU

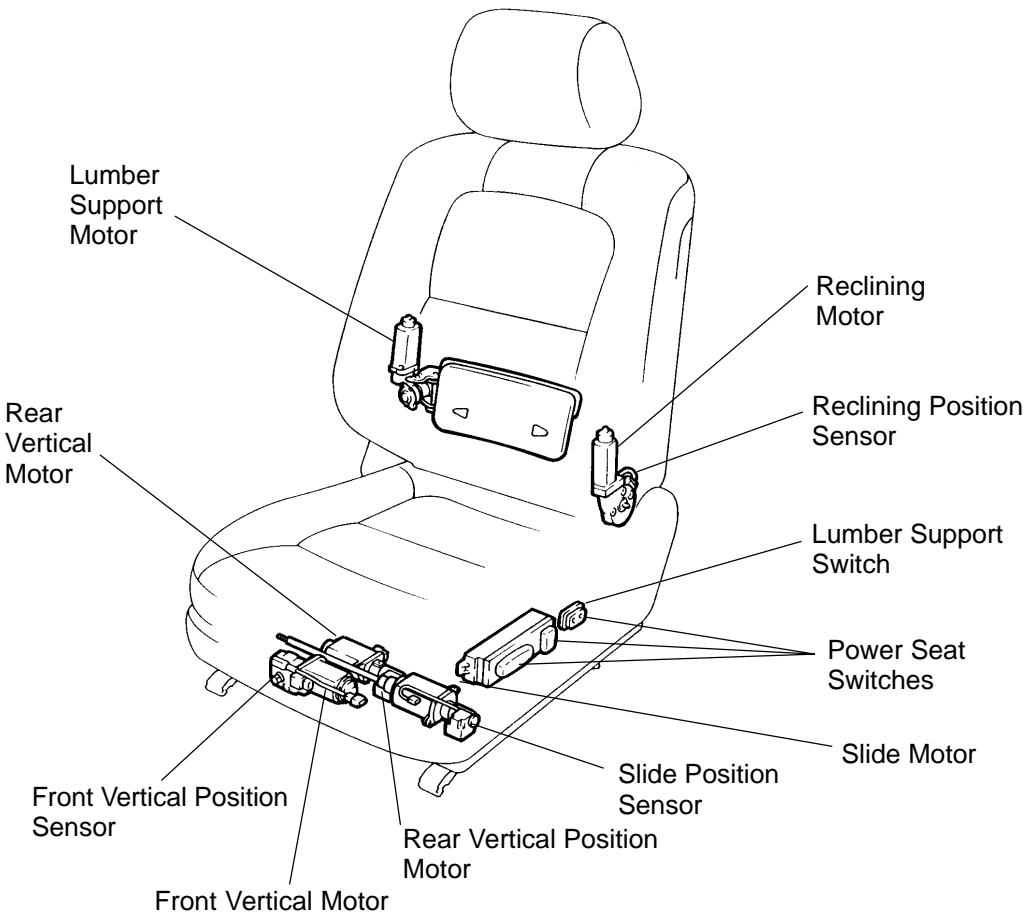

Lumber Support Motor

Reclining Motor

Reclining Position Sensor

Lumber Support Switch

Power Seat Switches

Slide Motor

Slide Position Sensor

Rear Vertical Position Motor

Front Vertical Position Sensor

Front Vertical Motor