


# Slide Motor Circuit

## CIRCUIT DESCRIPTION


The passenger's seat ECU control the slide motor.

## WIRING DIAGRAM

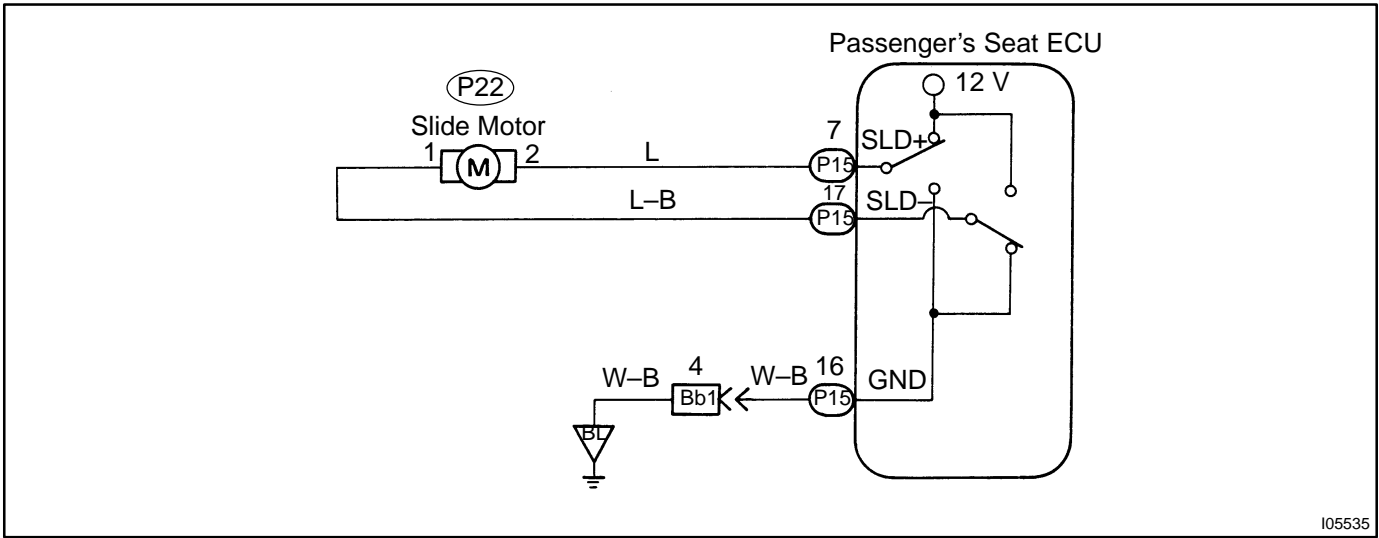

## INSPECTION PROCEDURE

1	Check Slide Motor.
---	--------------------

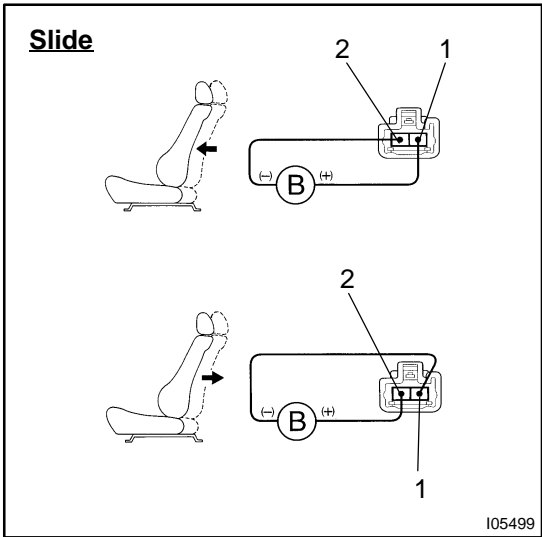

### PREPARATION:

- (a) Remove seat.
- (b) Disconnect slide motor connector.

### CHECK:

Check seat movement when battery positive voltage is applied to slide motor.

Connect positive  $\oplus$  (negative  $\ominus$ ) terminal to terminal 1 of slide motor connector and negative  $\ominus$  (positive  $\oplus$ ) terminal to terminal 2.

### OK:

Movement	Terminal 1	Terminal 2
Forward	$\oplus$	$\ominus$
Back	$\ominus$	$\oplus$

NG

Replace motor.

OK

2	Check for open and short in harness and connector between ECU and motor (See page <a href="#">IN-29</a> ).
---	--

**NG****Repair or replace harness or connector.****OK**

**Proceed to next circuit inspection shown on matrix chart (See page DI-633).**