

PROBLEM SYMPTOMS TABLE

Perform troubleshooting the circuits for the applicable problem symptom in the order given in the chart below. Proceed to the page located for each circuit.

Symptom	Suspect Area	See page
Walk-in function and return function do not operate. (However, they operate when using the manual switch.)	1. ECU Power Source Circuit 2. Limit Switch Circuit 3. Power Seat Position Sensor Circuit 4. Passenger's Seat ECU	DI-634 DI-656 DI-640 IN-29
Only walk-in operate is not functioning.	1. Buckle Switch Circuit 2. Limit Switch Circuit 3. Passenger's Seat ECU	DI-653 DI-656 IN-29
Only return operation in not functioning.	1. Limit Switch Circuit 2. Passenger's Seat ECU	DI-656 IN-29
Does not slide even when the manual switch is operated.	1. Slide Switch Circuit 2. Slide Motor Power Source Circuit 3. Slide Motor Circuit 4. Passenger's Seat ECU	DI-645 DI-636 DI-638 IN-29
Does not reclining, front vertical, rear vertical and lumbar support even when the manual switch is operated.	1. Reclining, front vertical, rear vertical, lumbar support switch and Motor Circuit	DI-649
Seat Returns to rear most position during return operation.	1. Limit Switch Circuit 2. Passenger's Seat ECU	DI-656 IN-29