


Tilt Motor Circuit

CIRCUIT DESCRIPTION

The ECU provides both +B and ground for the tilt motor.
Reversing polarity of the applied voltage reverses the motor.


WIRING DIAGRAM

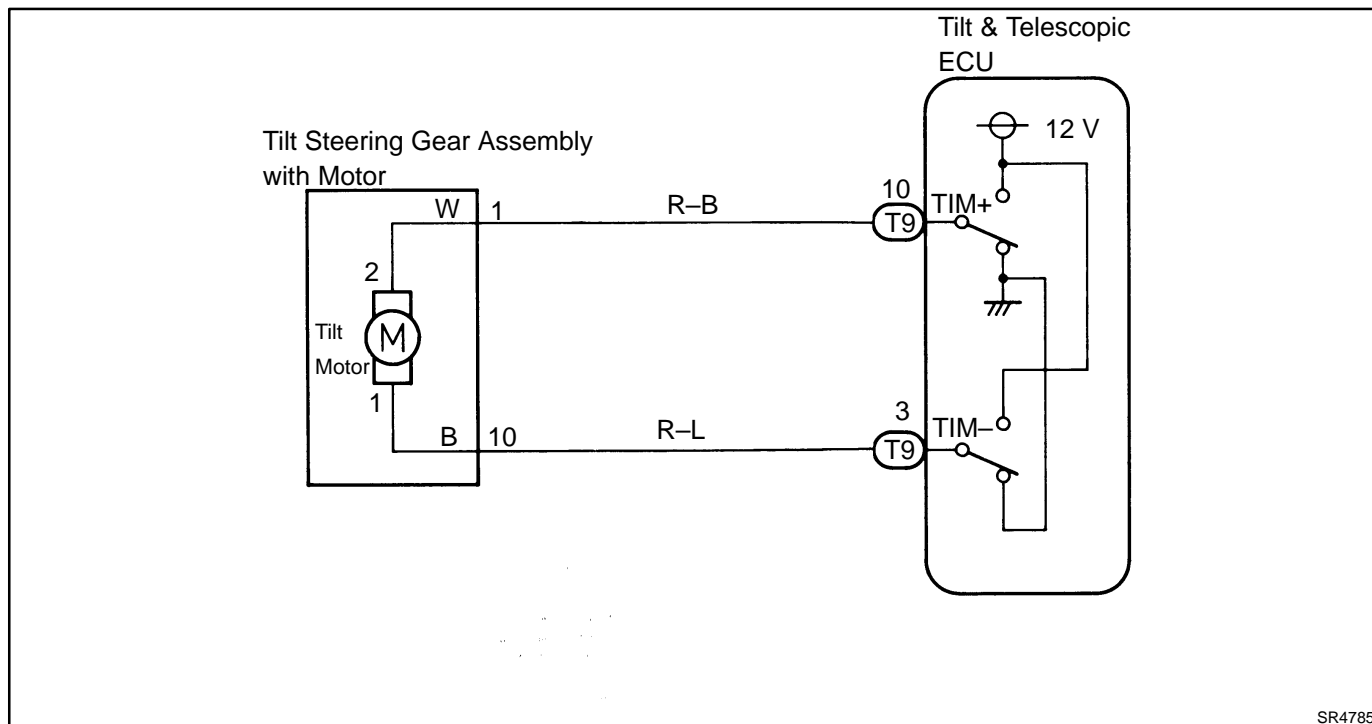

SR4785

INSPECTION PROCEDURE

1 Check tilt motor.

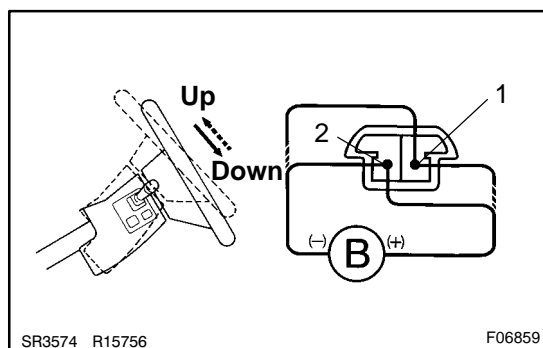

SR3574 R15756

F06859

PREPARATION:

Disconnect tilt motor connector.

CHECK:

Connect positive \oplus (negative \ominus) terminal to terminal 1 of tilt motor connector and negative \ominus (positive \oplus) terminal to terminal 2.

Movement	Terminal 1	Terminal 2
Tilts UP	\ominus	\oplus
Tilts DOWN	\oplus	\ominus

NG

Replace tilt steering gear assembly with motor.

OK

2**Check harness and connector between ECU and tilt motor (See page [IN-29](#)).****NG****Repair or replace harness or connector.****OK****Proceed to next circuit inspection shown on
matrix chart (See page [DI-498](#)).**