

## PROBLEM SYMPTOMS TABLE

Perform troubleshooting of the circuits for the applicable problem symptom in the order given in the chart below. Proceed to the page number given for each circuit.

HINT:

- If the instruction "Proceed to next circuit inspection shown on matrix chart" is given in the flow chart for each circuit, proceed to the circuit with the next highest number in the table to continue the check.
- If the trouble still reappears even though there are no abnormalities in any of the other circuits, then check and replace the Tilt & Telescopic ECU as the last step.

Trouble Symptom	Suspect Area	See page
Manual and auto return functions do not operate (Both tilt and telescopic)	1. ECU Power Source Circuit 2. Actuator Power Source Circuit 3. Unlock Warning Switch Circuit 4. Sensor Power Source Circuit 5. Tilt & Telescopic ECU	DI-499 DI-502 DI-536 DI-504 IN-29
Manual and auto return functions do not operate (Tilt only)	1. Tilt Position Sensor Circuit 2. Tilt Motor Circuit 3. Tilt & Telescopic ECU	DI-506 DI-509 IN-29
Manual and auto return functions do not operate (Telescopic only)	1. Telescopic Position Sensor Circuit 2. Telescopic Motor Circuit 3. Tilt & Telescopic ECU	DI-511 DI-514 IN-29
Auto return or auto return cut function does not operate	1. Auto Set Switch Circuit 2. Unlock Warning Switch Circuit 3. Tilt & Telescopic ECU	DI-516 DI-536 IN-29
Memory function does not operate	1. SET Switch Circuit 2. Tilt & Telescopic ECU	DI-521 IN-29
Only manual function does not operate (Both tilt and telescopic)	1. Manual Switch Circuit 2. Tilt & Telescopic ECU	DI-518 IN-29
Only manual function does not operate (Tilt only)	1. Manual Switch Circuit 2. Tilt & Telescopic ECU	DI-518 IN-29
Only manual function does not operate (Telescopic only)	1. Manual Switch Circuit 2. Tilt & Telescopic ECU	DI-518 IN-29
Only return function does not operate (Does not operate under any condition)	1. Memory & Return Switches Circuit 2. SET Switch Circuit 3. Tilt & Telescopic ECU	DI-524 DI-521 IN-29
Only return function does not operate (Only with key inserted)	1. Ignition Switch Circuit 2. Park/Neutral Position Switch (A/T) 3. Parking Brake Switch Circuit (M/T) 4. Tilt & Telescopic ECU	DI-527 DI-529 DI-531 IN-29
Only return function does not operate (Only with key not inserted)	1. Door Courtesy Switch Circuit 2. Unlock Warning Switch Circuit 3. Tilt & Telescopic ECU	DI-534 DI-536 IN-29
Only return function does not operate (Only with memory & return switch 1 or 2)	1. Memory & Return Switch Circuit 2. Tilt & Telescopic ECU	DI-524 IN-29