

SRS Warning Light System Malfunction (Always lit up, when ignition switch is in LOCK position.)


CIRCUIT DESCRIPTION

The SRS warning light is located on the combination meter.

When the SRS is normal, the SRS warning light lights up for approx. 6 seconds after the ignition switch is turned from LOCK position to ACC or ON position, and then turns off automatically.

If there is a malfunction in the SRS, the SRS warning light lights up to inform the driver of the abnormality. When terminals Tc and E₁ of the DLC1 are connected, the DTC is displayed by the blinking of the SRS warning light.


WIRING DIAGRAM

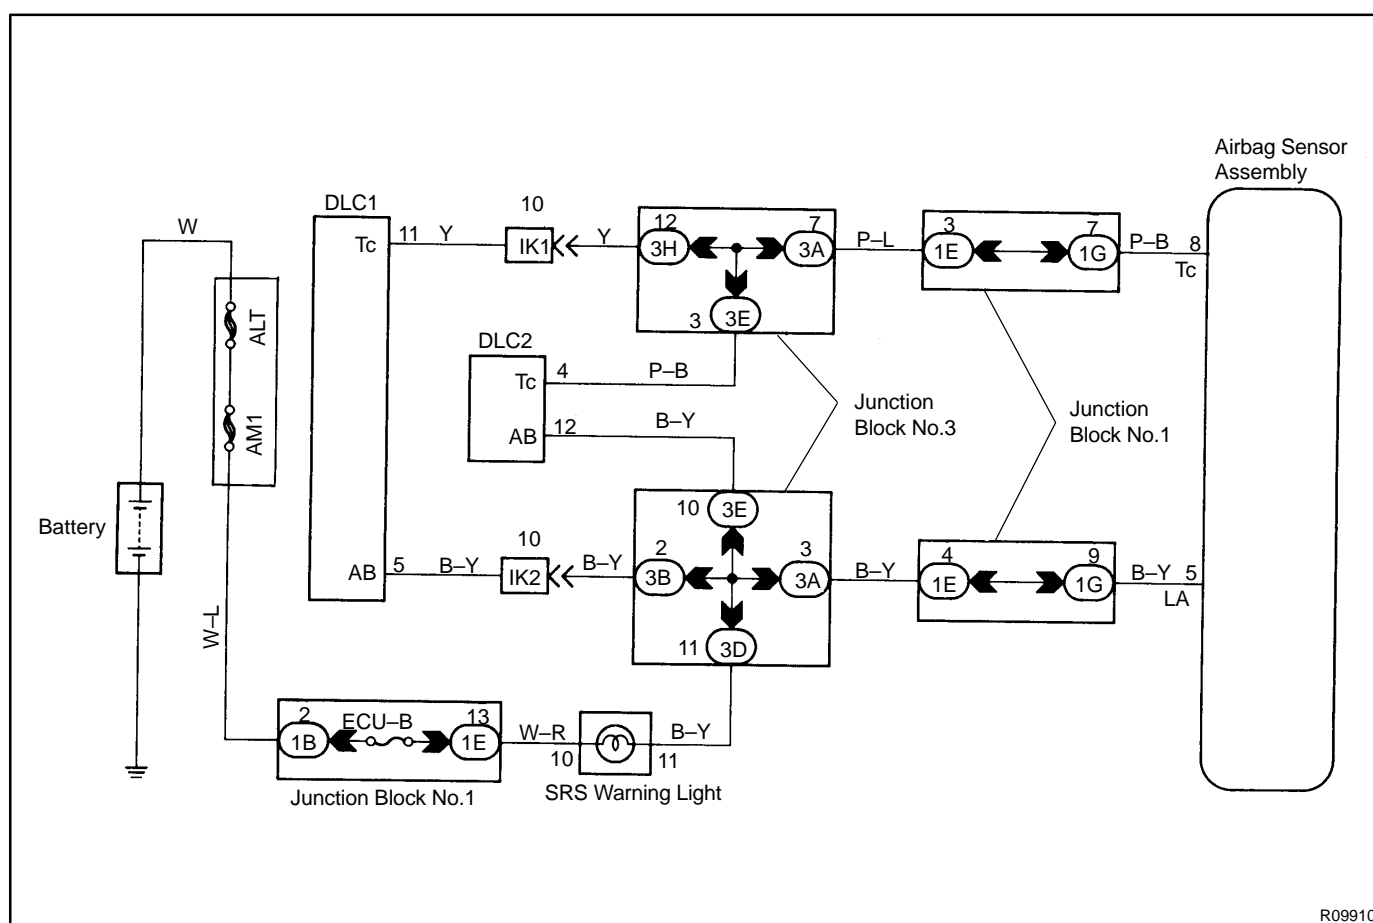

R09910

INSPECTION PROCEDURES


1 Preparation.

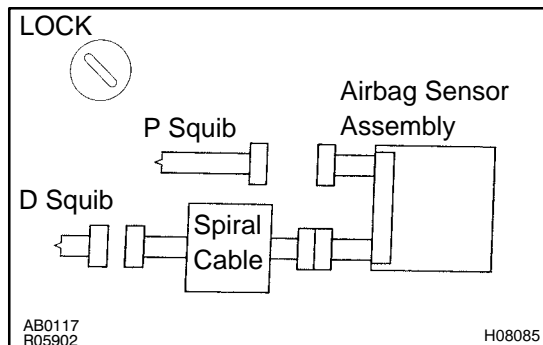**PREPARATION:**


- Disconnect negative (–) terminal cable from the battery, and wait at least 90 seconds.
- Remove steering wheel pad (See page [SR-11](#)).
- Disconnect connector of front passenger airbag assembly (See page [RS-21](#)).

CAUTION:

Store the steering wheel pad with the front surface facing upward.

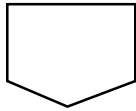

2 Does SRS warning light turn off?

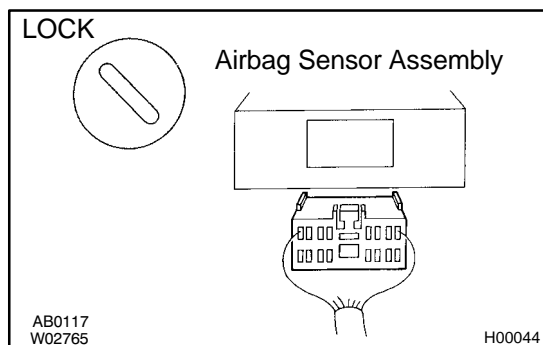**PREPARATION:**

- Turn ignition switch to LOCK.
- Disconnect negative (–) terminal cable from the battery, and wait at least 90 seconds.
- Disconnect airbag sensor assembly connector.
- Connect negative (–) terminal cable to battery.

CHECK:

Check operation of SRS warning light.

NO

Check SRS warning light circuit or terminal AB circuit of DLC1.

YES

Replace airbag sensor assembly.