


PRE-CHECK

1. SRS WARNING LIGHT CHECK

- Turn the ignition switch to ACC or ON and check that the SRS warning light lights up.
- Check that the SRS warning light goes out after approx. 6 seconds.

HINT:

- When the ignition switch is at ACC or ON and the SRS warning light remains on or flashes, the airbag sensor assembly has detected a malfunction code.
- If, after approx. 6 seconds have elapsed, the SRS warning light sometimes lights up or the SRS warning light lights up even when the ignition switch is OFF, a short in the SRS warning light circuit can be considered likely. Proceed to "SRS warning light system malfunction" on page DI-582, DI-584.

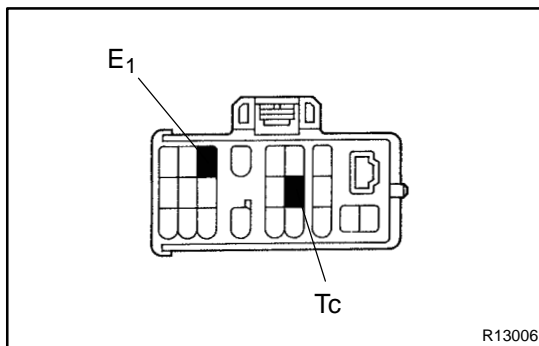


2. DTC CHECK (Using diagnosis check wire)

- Output the DTC.
 - Turn the ignition switch to ACC or ON position and wait approx. 20 seconds.
 - Using SST, connect terminals Tc and E₁ of the DLC1.

SST 09843-18020

NOTICE:


Never make a mistake with the terminal connection position as this will cause a malfunction.

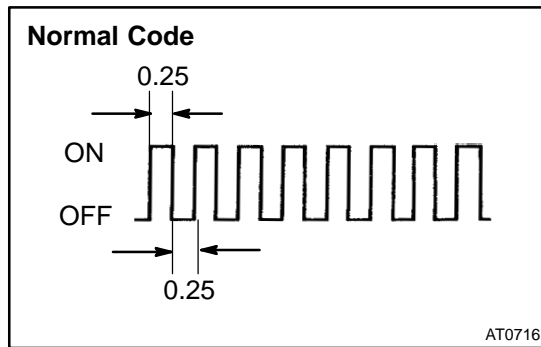

(b) Read the DTC.

Read the 2-digit DTC as indicated by the number of times the SRS warning light blinks. As an example, the blinking patterns, normal, 11 and 31 are as shown on the illustration.


- Normal code indication.
The light will blink 2 times per second.
- Malfunction code indication
The first blinking output indicates the first digit of a 2-digit DTC. After a 1.5 second pause, the second blinking output will indicate the second digit.

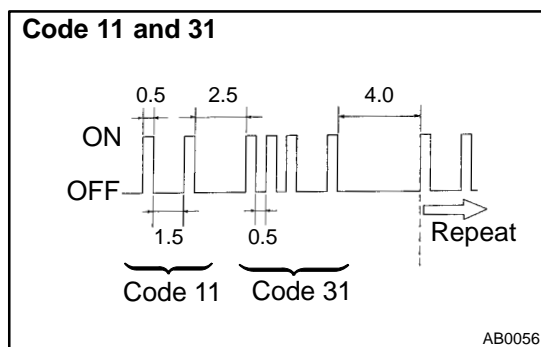

If there are 2 or more codes, there will be a 2.5 second pause between each code. After all the codes have been output, there will be a 4.0 second pause and they will all be repeated.

HINT:

- In the event of a number of trouble codes, indication will start from the smallest numbered code.
- If it does not output a DTC or outputs a DTC without terminal connection, proceed to the Tc terminal circuit inspection on page DI-587.

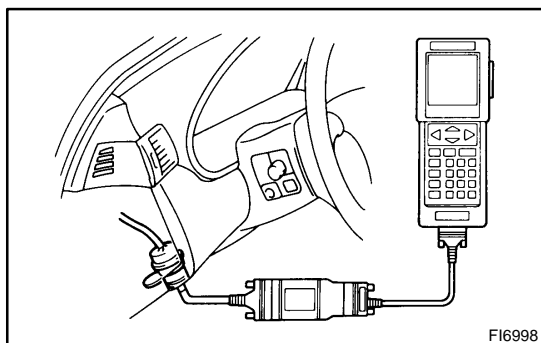**3. DTC CHECK (Using LEXUS hand-held tester)**

- Hook up the LEXUS hand-held tester to the DLC1.
- Read the DTCs by following the prompts on the tester screen.

HINT:

Please refer to the LEXUS hand-held tester operator's manual, for further details.

4. DTC CLEARANCE

When the ignition switch is turned off, the DTC is cleared.