

PROBLEM SYMPTOMS TABLE

Proceed with troubleshooting of each circuit in the table below.

Problem Symptom	Inspection Item	Page
<ul style="list-style-type: none"> • With the ignition switch at ACC or ON, the SRS warning light sometimes lights up after approx. 6 seconds have elapsed. • SRS warning light lights up even when ignition switch is in the LOCK position. 	<ul style="list-style-type: none"> • SRS warning light system malfunction (Always lit up when ignition switch is in LOCK position.) 	DI-582
<ul style="list-style-type: none"> • With the ignition switch at ACC or ON, the SRS warning lights does not lights up. 	<ul style="list-style-type: none"> • SRS warning light system malfunction (Does not light up when ignition switch is turned to ACC or ON.) 	DI-584
<ul style="list-style-type: none"> • DTC not displayed. • SRS warning light is always lit up with a DTC check procedure. • DTC displayed without Tc and E₁ terminal connection. 	<ul style="list-style-type: none"> • Tc terminal circuit 	DI-587