

## PROBLEM SYMPTOMS TABLE

Proceed to the reference page shown in the matrix chart below for each malfunction symptom and trouble-shoot for each circuit.

HINT:

Troubleshooting of the theft deterrent system is based on the premise that the door lock control system is operating normally. Accordingly, before troubleshooting the theft deterrent system, first make certain that the door lock control system is operating normally.

Details of Problem	Inspecting Circuit *1	See page
The theft deterrent system cannot be set	1. Indicator light circuit	DI-731
	2. Luggage compartment door courtesy switch circuit	DI-750
	3. Door unlock detection switch circuit	DI-754
	4. Engine hood courtesy switch circuit	DI-756
The indicator light does not blink when system is set	Indicator light circuit	DI-731
<ul style="list-style-type: none"> <li>When the system is set</li> <li>When the front door is unlocked</li> <li>The system does not operate</li> </ul>	Door unlock detection switch circuit	DI-754
<ul style="list-style-type: none"> <li>When the system is set</li> <li>When the luggage compartment door is opened by a method other than the key</li> <li>The system does not operate</li> </ul>	Luggage compartment door courtesy switch circuit	DI-750
<ul style="list-style-type: none"> <li>When the system is set</li> <li>When the engine hood is opened</li> <li>The system does not operate</li> </ul>	Engine hood courtesy switch circuit	DI-756
<ul style="list-style-type: none"> <li>While the system is in warning operation</li> <li>Horns do not sound</li> </ul>	Horn relay circuit	DI-735
<ul style="list-style-type: none"> <li>While the system is in warning operation</li> <li>Theft deterrent horn do not sound</li> </ul>	Theft deterrent horn circuit	DI-737
<ul style="list-style-type: none"> <li>While the system is in warning operation</li> <li>Headlight do not flash</li> </ul>	Headlight control relay circuit	DI-740
<ul style="list-style-type: none"> <li>While the system is in warning operation</li> <li>Taillights do not flash</li> </ul>	Taillight control relay circuit	DI-742
<ul style="list-style-type: none"> <li>While the system is in warning operation</li> <li>The starter cut is not cut off</li> </ul>	Starter relay circuit	DI-733
<ul style="list-style-type: none"> <li>When the system is set</li> <li>It is not canceled when the ignition key is turned to ACC or ON position</li> </ul>	Ignition switch circuit	DI-744
<ul style="list-style-type: none"> <li>When the system is set</li> <li>It still operates when the luggage compartment door is opened with the key</li> </ul>	Luggage compartment door key operate switch circuit	DI-747
Starter does not turn after the system is canceled	Starter relay circuit	DI-733
<ul style="list-style-type: none"> <li>Even when the system is not set</li> <li>Horns sound</li> </ul>	Horn relay circuit	DI-735
<ul style="list-style-type: none"> <li>Even when the system is not set</li> <li>Theft deterrent horn sounds</li> </ul>	Theft deterrent horn circuit	DI-737
<ul style="list-style-type: none"> <li>Even when the system is not set</li> <li>Headlights stay on</li> </ul>	Headlight control relay circuit	DI-740
<ul style="list-style-type: none"> <li>Even when the system is not set</li> <li>Taillights stay on</li> </ul>	Taillight control relay circuit	DI-742

\*1: If numbers are given to the circuit proceed with troubleshooting in the order indicated by those numbers.