


## TERMINALS OF ECM

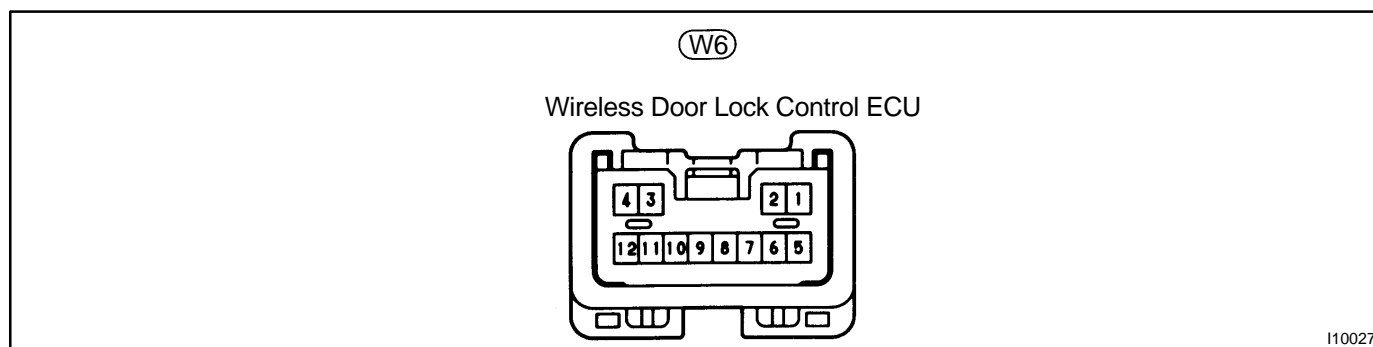

Terminals	Symbols	Condition	Standard Value
W6-1 ↔ W6-7	BZR ↔ BZR2	Buzzer not sound	Below 1V
		Buzzer sound	8 – 10 V
W6-2 ↔ W6-9	+B ↔ Ground	Always	10 – 14 V
W6-3 ↔ Ground	IG ↔ Ground	Turn ignition switch OFF or ACC	Below 1V
		Turn ignition switch ON	10 – 14 V
W6-4 ↔ Ground	UL ↔ Ground	Door key lock and unlock switch left and right UNLOCK	Below 1.5V
		Door key lock and unlock switch left or right UNLOCK	
		Except above mention	8 – 10 V
W6-5 ↔ Ground	T ↔ Ground	Luggage compartment door key operated switch ON.	Below 1Ω
		Luggage compartment door key operated switch OFF.	1MΩ or higher
W6-6 ↔ Ground	L ↔ Ground	Turn ignition switch ON. door key lock and unlock switch Light LOCK	Below 1V
		Turn ignition switch ON, Except above mention	8 – 10 V
W6-8 ↔ Ground	KSW ↔ Ground	Ignition key insert key cylinder	Below 1V
		Ignition key pull out key cylinder	10 – 14 V
W6-9 ↔ Ground	E ↔ Ground	Always	Below 1V
W6-10 ↔ Ground	LSWD ↔ Ground	Door lock knob of driver's door UNLOCK	Below 1V
		Door lock knob of driver's door LOCK	8 – 10 V
W6-11 ↔ Ground	LSWP ↔ Ground	Door lock knob of passenger's door UNLOCK	Below 1V
		Door lock knob of passenger's door LOCK	8 – 10 V
W6-12 ↔ Ground	CTY ↔ Ground	Door open detection switch left and right ON	Below 1V
		Door open detection switch left or right ON	
		Door open detection switch left or right OFF	
		Door open detection switch left and right OFF	10 – 14 V