

REMOVAL

1. REMOVE NO.1 IGNITION COIL

- (a) Remove the battery clamp cover.
- (b) Remove the battery and battery tray.
- (c) Disconnect the ignition coil connector.
- (d) Disconnect the high-tension cord.
- (e) Disconnect the noise filter connector.
- (f) Remove the ignition coil.
- (1) Remove the 2 bolts, ignition coil and bracket.


IG01N-01

Torque:

10 mm head: 7.5 N·m (80 kgf·cm, 69 in.-lbf)

14 mm head: 34 N·m (350 kgf·cm, 25 ft·lbf)

- (2) Remove the 4 screws and ignition coil from the bracket.

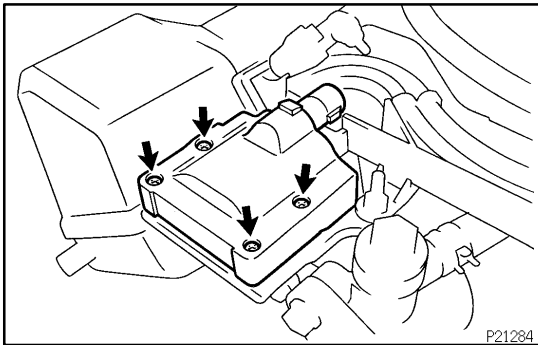

2. REMOVE NO.2 IGNITION COIL

- (a) Remove the V-bank cover.
- (b) Disconnect the high-tension cord.
- (c) Remove the ignition coil.
- (1) Remove the 4 screws and ignition coil, and disconnect the ignition coil from the bracket.

Torque: 34 N·m (350 kgf·cm, 25 ft·lbf)

- (2) Disconnect the ignition coil connector, and remove the ignition coil.