
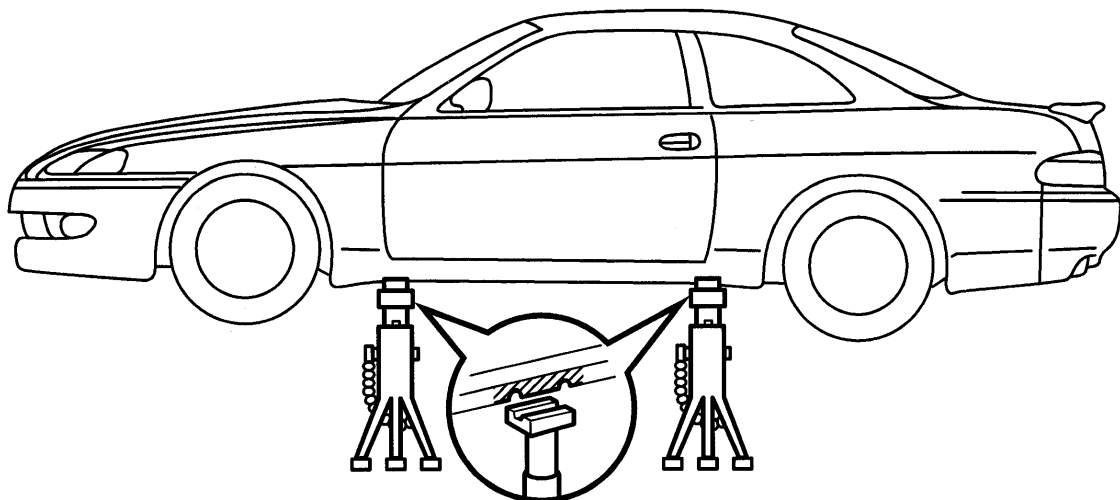



VEHICLE LIFT AND SUPPORT LOCATIONS

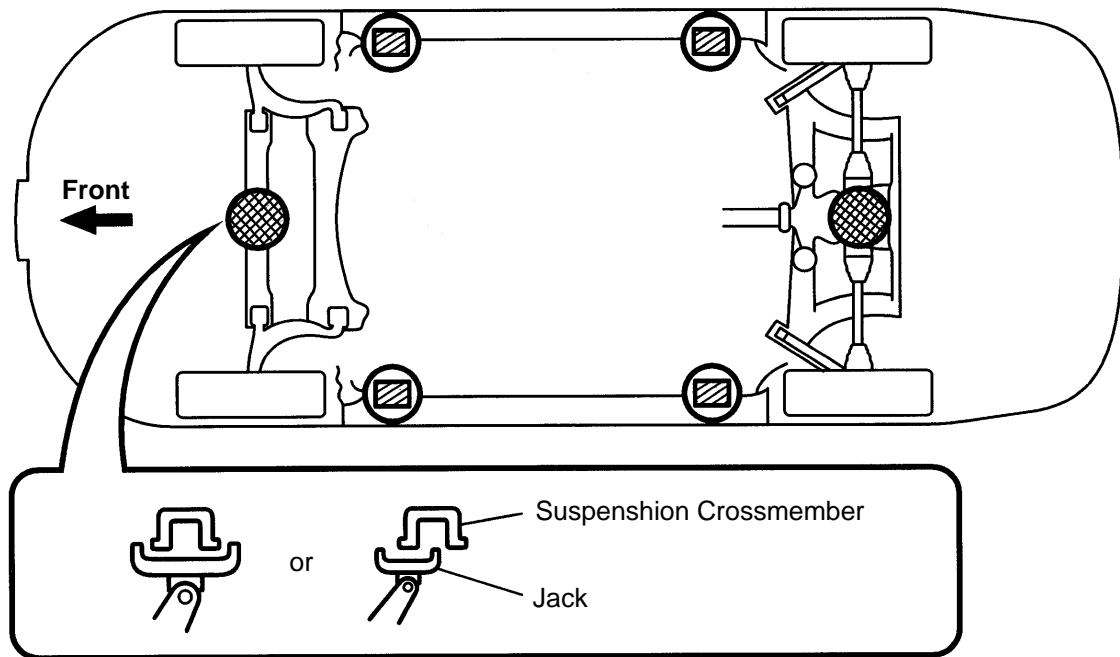

- JACK POSITION** ———— ●
- Front Center of suspension crossmember
- Rear Hack up support of differential carrier
- PANTOGRAPH JACK POSITION** ———— ○
- SUPPORT POSITION**
- Safety stand or swing arm type lift ▨

N21886

PLATE TYPE LIFT

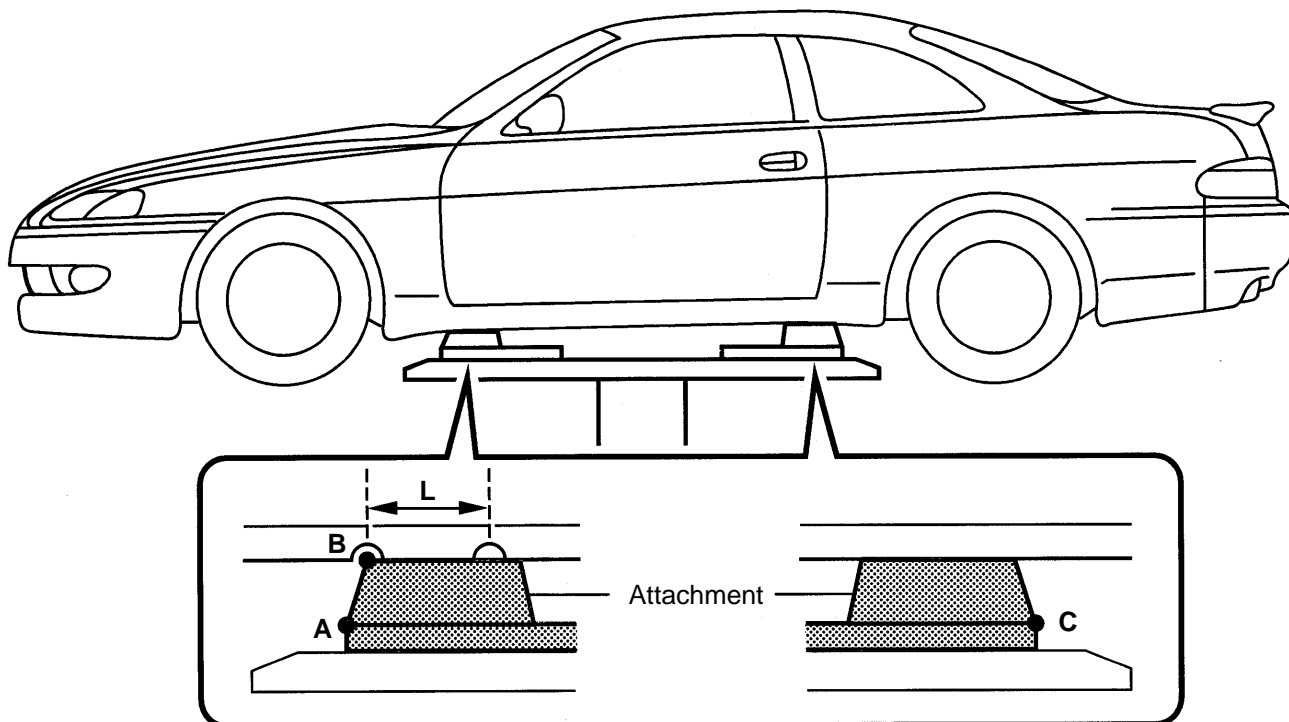**HINT:**


Left and right set position

Front and rear set position

Place the vehicle over the center of the lift.

- Align the cushion gum ends of the plate with the attachment lower ends (A, C).
- Align the attachment upper end (B) with the front hack supporting point (L).

Attachment dimensions

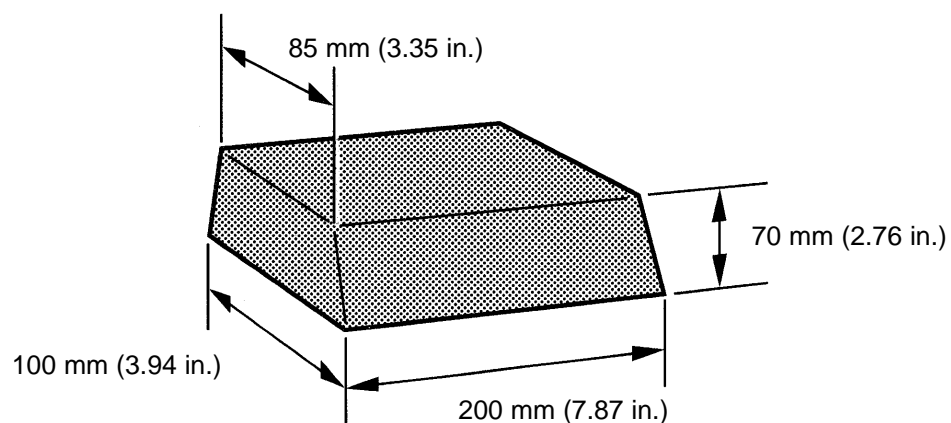

N22670