

TERMS

ABBREVIATIONS USED IN THIS MANUAL

IN03P-02

| Abbreviations | Meaning |
|---------------|-----------------------------------------|
| ABS | Anti-Lock Brake System |
| ALR | Automatic Locking Retractor |
| A/T | Automatic Transmission |
| ATF | Automatic Transmission Fluid |
| BTDC | Before Top Dead Center |
| Calif. | California |
| CB | Circuit Breaker |
| CRS | Child Restraint System |
| DEF | Defogger |
| DOHC | Double Over Head Cam |
| DP | Dash Pot |
| ECU | Electronic Control Unit |
| ELR | Emergency Locking Retractor |
| EPR | Evaporator Pressure Regulator |
| ESA | Electronic Spark Advance |
| EX | Exhaust (Manifold, Valve) |
| FIPG | Formed in Place Gasket |
| FL | Fusible Link |
| FPU | Fuel Pressure Up |
| Fr | Front |
| HAC | High Altitude Compensation |
| IG | Ignition |
| IIA | Integrated Ignition Assembly |
| IN | Intake (Manifold, Valve) |
| J/B | Junction Block |
| LED | Light Emitting Diode |
| LH | Left-Hand |
| LLC | Long Life Coolant (Year Around Coolant) |
| LSPV | Load Sensing Proportioning valve |
| Max. | Maximum |
| Min. | Minimum |
| MP | Multipurpose |
| O/D, OD | Overdrive |
| O/S | Oversize |
| P&BV | Proportioning and Bypass Valve |
| PCV | Positive Crankcase Ventilation |
| PKB | Parking Brake |
| PS | Power Steering |
| RH | Right-Hand |
| Rr | Rear |
| SRS | Supplemental Restraint System |
| SSM | Special Service Materials |

INTRODUCTION – TERMS

| | |
|-------|---------------------------|
| SST | Special Service Tools |
| STD | Standard |
| SW | Switch |
| TDC | Top Dead center |
| TEMP. | Temperature |
| T/M | Transmission |
| U/S | Undersize |
| VCV | Vacuum Control Valve |
| VSV | Vacuum Switching Valve |
| VTV | Vacuum Transmitting Valve |
| w/ | With |
| w/o | Without |