


## ENGINE INSPECTION

1. **REPLACE TIMING BELT**  
(2JZ-GE ENGINE: See page [EM-15](#))  
(1UZ-FE ENGINE: See page [EM-18](#))
2. **INSPECT DRIVE BELT**  
(2JZ-GE ENGINE: See page [CH-2](#))  
(1UZ-FE ENGINE: See page [CH-2](#))

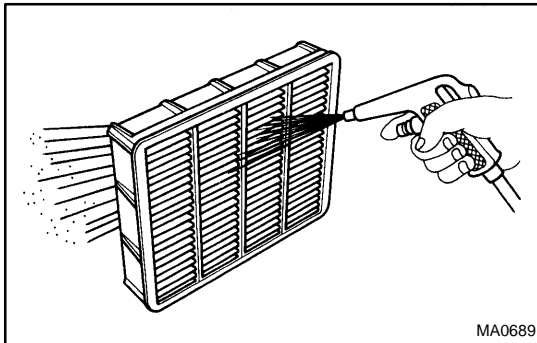

3. **INSPECT AIR FILTER**
  - (a) Open the air cleaner cap.
  - (b) Remove the air filter.
  - (c) Visually check that the air filter is not damaged excessively oily.

If necessary, replace the air filter.

- (d) Clean the filter with compressed air.  
First blow from the inside thoroughly, then blow the outside of the filter.
- (e) Reinstall the air filter.

4. **REPLACE AIR FILTER**

Replace the air filter with a new one.

5. **REPLACE SPARK PLUGS**  
(2JZ-GE ENGINE: See page [IG-1](#))  
(1UZ-FE ENGINE: See page [IG-1](#))
6. **REPLACE ENGINE OIL AND OIL FILTER**  
(2JZ-GE ENGINE: See page [LU-3](#))  
(1UZ-FE ENGINE: See page [LU-2](#))
7. **REPLACE ENGINE COOLANT**  
(2JZ-GE ENGINE: See page [CO-2](#))  
(1UZ-FE ENGINE: See page [CO-2](#))
8. **INSPECT CHARCOAL CANISTER**  
(2JZ-GE ENGINE: See page [EC-5](#))  
(1UZ-FE ENGINE: See page [EC-6](#))
9. **REPLACE GASKET IN FUEL TANK CAP**  
(2JZ-GE ENGINE: See page [EC-5](#))  
(1UZ-FE ENGINE: See page [EC-6](#))

10. **INSPECT FUEL LINES AND CONNECTIONS**

Visually check the fuel lines for cracks, leakage, loose connections or deformation.

11. **INSPECT EXHAUST PIPES AND MOUNTINGS**

Visually check the pipes, hangers and connections for severe corrosion, leaks or damage.

12. **ADJUST VALVE CLEARANCE**  
(2JZ-GE ENGINE: See page [EM-4](#))  
(1UZ-FE ENGINE: See page [EM-4](#))