


REPLACEMENT

IF NECESSARY, REPLACE CONTROL SHIFT LEVER RETAINER OIL SEAL

- (a) Remove the No. 2 inner shift lever set bolt.
- (b) Remove the No. 2 inner shift lever and control shaft from the control shift lever retainer.
- (c) Using a screwdriver, pry out the oil seal.

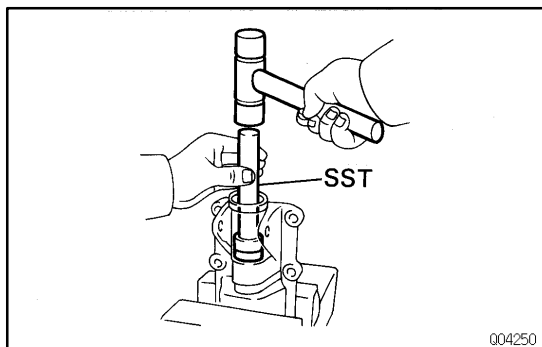

- (d) Using SST and a hammer, install a new oil seal.
SST 09304-12012
Drive in depth: 55.7 ± 0.3 mm (2.193 ± 0.012 in.)
- (e) Install the control shaft and No. 2 inner shift lever to the control shift lever retainer.
- (f) Install and torque the No. 2 inner shift lever set bolt.
Torque: 36 N·m (365 kgf-cm, 26 ft-lbf)