



REPLACEMENT

IF NECESSARY, REPLACE FRONT BEARING RETAINER OIL SEAL

- (a) Using a screwdriver, pry out the oil seal.
- (b) Using SST and a press, install a new oil seal.

SST 09950-60010 (09951-00440),
09950-70010 (09951-07150)

Drive in depth: 12.2 ± 0.5 mm (0.480 ± 0.020 in.)