 

 
 


 
 
 



 
 
 
 

 



MANUAL TRANSMISSION

SST (Special Service Tools)

PP2VC-01

	09304-12012	Input Shaft Front Bearing Replacer	Control shift lever retainer oil seal
	09308-00010	Oil Seal Puller	Output shaft rear bearing outer race
	09308-10010	Oil Seal Puller	Extension housing oil seal
	09312-20011	Transmission Gear Remover & Replacer	5th gear Output shaft rear bearing Reverse gear
	(09313-00010)	Reverse Gear Remover	
	(09313-00030)	Rear Bearing Replacer	
	(09313-00040)	Plate "A"	
	(09313-00050)	Plate "B"	
	09316-60011	Transmission & Transfer Bearing Replacer	No.3 clutch hub Counter gear center bearing outer race
	(09316-00011)	Replacer Pipe	
	(09316-00071)	Replacer "F"	
	09506-35010	Differential Drive Pinion Rear Bearing Replacer	Input shaft bearing Output shaft center bearing

	09950-00020 Bearing Remover	
	09950-60010 Replacer Set	
	(09951-00440) Replacer 44	Front bearing retainer oil seal
	(09951-00510) Replacer 51	Counter shaft center bearing outer race
	(09951-00560) Replacer 56	Output shaft rear bearing outer race Extension housing oil seal
	09950-70010 Handle Set	
	(09951-07150) Handle 150	