



 
 
 
 
 


PROPELLER SHAFT

SST (Special Service Tools)

PP0X3-01

	09325-20010	Transmission Oil Plug	SC300 (M/T): Oil leakage prevention
	09325-40010	Transmission Oil Plug	SC300 (A/T): Oil leakage prevention
	09330-00021	Companion Flange Holding Tool	SC300: Companion flange
	09330-50010	Propeller Shaft Center Bearing Replacer	SC400: Center support bearing
	09370-50010	Drive Line Angle Gauge	Joint angle
	09608-00071	Drive Pinion Rear Bearing Cone Replacer	SC400: Dust deflector
	09608-06041	Front Hub Inner Bearing Cone Replacer	SC400: Dust deflector
	09922-10010	Variable Open Wrench	SC400: Adjusting nut
	09950-00020	Bearing Remover	SC400: Center support bearing