

TROUBLESHOOTING

PROBLEM SYMPTOMS TABLE

PR02W-07

Symptom	Suspect Area	See page
Noise	5. Center bearing (Worn)	SC300: PR-4
		SC400: PR-11
	6. Flexible rubber coupling (Worn)	SC300: PR-4
		SC400: PR-11
	7. Spider bearing (Worn or stuck)	SC300: PR-4
Vibration		SC400: PR-11
	1. Transmission extension housing rear bushing (Worn)	–
	2. Propeller shaft (Runout)	SC300: PR-4
		SC400: PR-11
	3. Propeller shaft (Imbalance)	–