


INSTALLATION

NOTICE:

- Never use SRS parts from another vehicle. When replacing parts, replace them with new parts.
- Never reuse the airbag sensor assembly involved in a collision when the airbag has deployed.
- Never repair a sensor in order to reuse it.

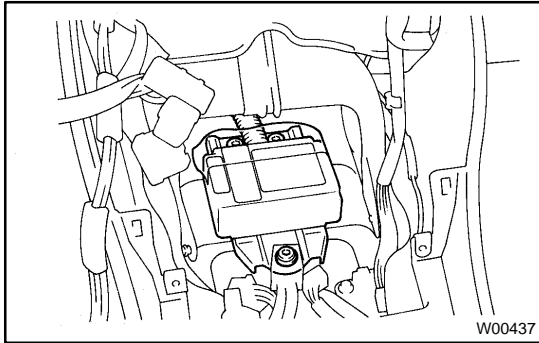

1. INSTALL AIRBAG SENSOR ASSEMBLY

- (a) Using a torx wrench, temporarily install the airbag sensor assembly with 3 torx screws.

Torx wrench: T40 (Part No.09042-00020 or locally manufactured tool)

Torque: 21 N·m (210 kgf-cm, 15 ft-lbf)

- (b) Connect the connector.

NOTICE:

- Installation of the connector is done with the sensor assembly installed.
- Make sure that the sensor assembly is installed with the specified torque.
- If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.
- When installing the sensor assembly, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.
- After installing, shake the sensor assembly to check that there is no looseness.

2. INSTALL THESE PARTS:

(See page [BO-101](#))

- (a) Radio
- (b) Upper console panel
- (c) Cup holder
- (d) Upper console panel rear
- (e) Shift lever knob