

REMOVAL

NOTICE:


Do not open the cover or the case of the ECU and electrical device unless absolutely necessary.

(If the IC terminals are touched, the IC may be destroyed by static electricity.)

1. REMOVE THESE PARTS:

(See page [BO-95](#))

- (a) Shift lever knob
- (b) Upper console panel rear
- (c) Cup holder
- (d) Upper console panel
- (e) Radio

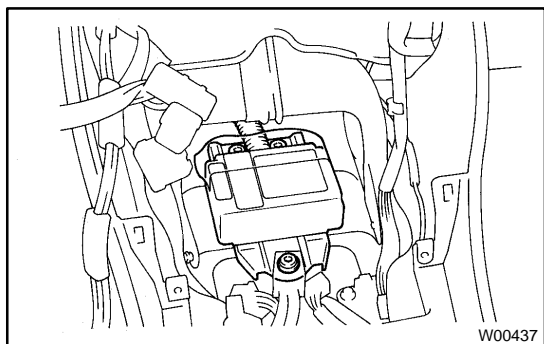

2. REMOVE AIRBAG SENSOR ASSEMBLY

- (a) Using a torx wrench, loosen and tighten the 3 screws.
Torx wrench: T40 (Part No. 09042-00020 or locally manufactured tool)
- (b) Disconnect the connector.

NOTICE:

Removal the connector with the sensor assembly installed.

- (c) Remove the 3 torx screws and airbag sensor assembly.