

## INSTALLATION

### NOTICE:

Never use airbag parts from another vehicle. When replacing parts, replace them with new parts.


### 1. INSTALL FRONT PASSENGER AIRBAG ASSEMBLY

Install the 2 nuts and the 3 bolts.

**Torque: 21 N·m (210 kgf-cm, 15 ft-lbf)**

### NOTICE:

- Make sure the front passenger airbag assembly is installed to the specified torque.
  - If the front passenger airbag assembly has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front passenger airbag assembly with a new one.
  - When installing the front passenger airbag assembly, take care that the wiring does not interfere with other parts and is not pinched between other parts.
- 2. INSTALL THESE PARTS:**  
(See page [BO-92](#))
- (a) Glove compartment door lock mounting bracket
  - (b) Glove compartment assembly
  - (c) No.2 instrument panel under cover

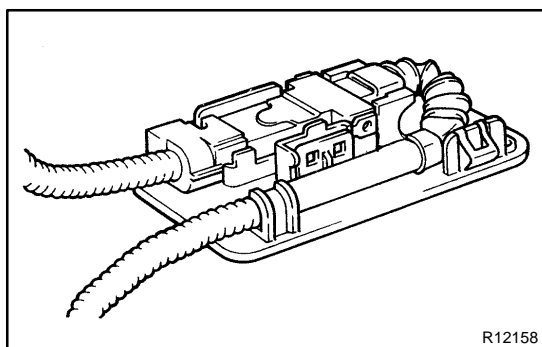

### 3. CONNECT AIRBAG CONNECTOR

- (a) Connect the airbag connector.
  - (b) Install the connector on the glove compartment door finish plate.
- (c) Install the glove compartment door finish plate to the instrument panel box.

