


REMOVAL

NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is at ON or ACC, DTCs will be recorded.
- Never use the airbag parts from another vehicle. When replacing parts, replace with new parts.

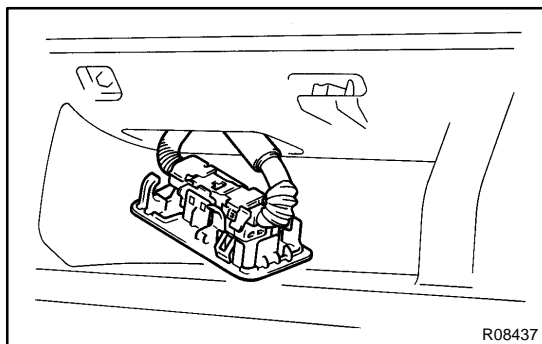


1. DISCONNECT AIRBAG CONNECTOR

- Remove the glove compartment door finish plate inside the instrument panel box.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

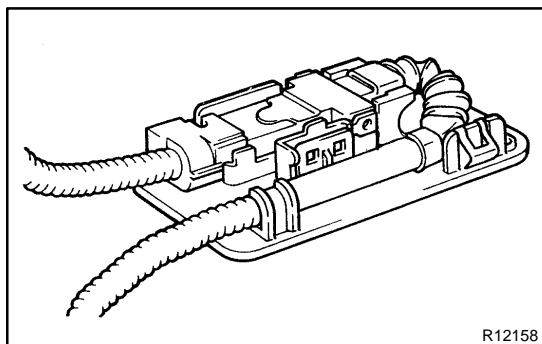


- Pull up the connector.
- Disconnect the airbag connector.

2. REMOVE THESE PARTS:

(See page [BO-92](#))

- No.2 instrument panel under cover
- Glove compartment assembly
- Glove compartment door lock mounting bracket

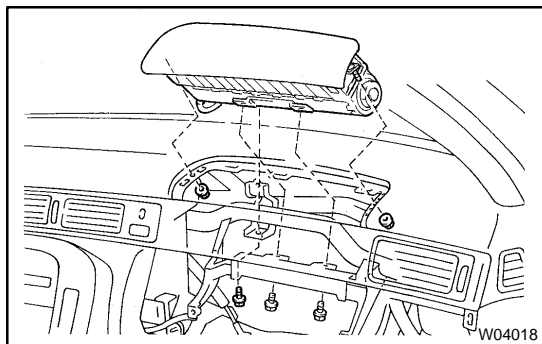

3. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY

- Remove the 3 bolts and 2 nuts.
- Pull out the front passenger airbag assembly from the instrument panel.

CAUTION:

- Do not store the front passenger airbag assembly with the airbag deployment direction facing down.
- Never disassemble the front passenger airbag assembly.