

REPLACEMENT

REPLACEMENT REQUIREMENTS

In the following cases, replace the steering wheel pad, steering wheel or spiral cable. [SR-21](#)

- If the airbag has been deployed.
- If the steering wheel pad or spiral cable has been found to be faulty in troubleshooting.
- If the steering wheel pad, steering or spiral cable has been found to be faulty during checking items. (See page [RS-9](#))
- If the steering wheel pad has been dropped.

CAUTION:

For removal and installation of the steering wheel pad, see page [SR-11](#) and [SR-21](#), and be sure to follow the correct procedure.